



Illustrated Parts List

Model Series

11P900

TYPE NUMBERS
0119 through 1326.


TABLE OF CONTENTS

Air Cleaner	4
Alternator	6
Blower Housing	2
Camshaft	14
Carburetor	4
Carburetor Overhaul Kit	18
Control Bracket	4
Crankshaft	16
Cylinder	16
Cylinder Head	12
Electrical System	6
Exhaust System	10
Flywheel	8
Fuel Supply	2
Gasket Sets	18
Governor Spring	4
Guards	10
Lubrication	2
Operator's Manual	2
Piston/Rings/Connecting Rod	16
Rewind Starter	2
Shields	10
Sump	14
Thermostat	10
Valves	12
Warning Label	2



PRINTED IN U.S.A.


COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

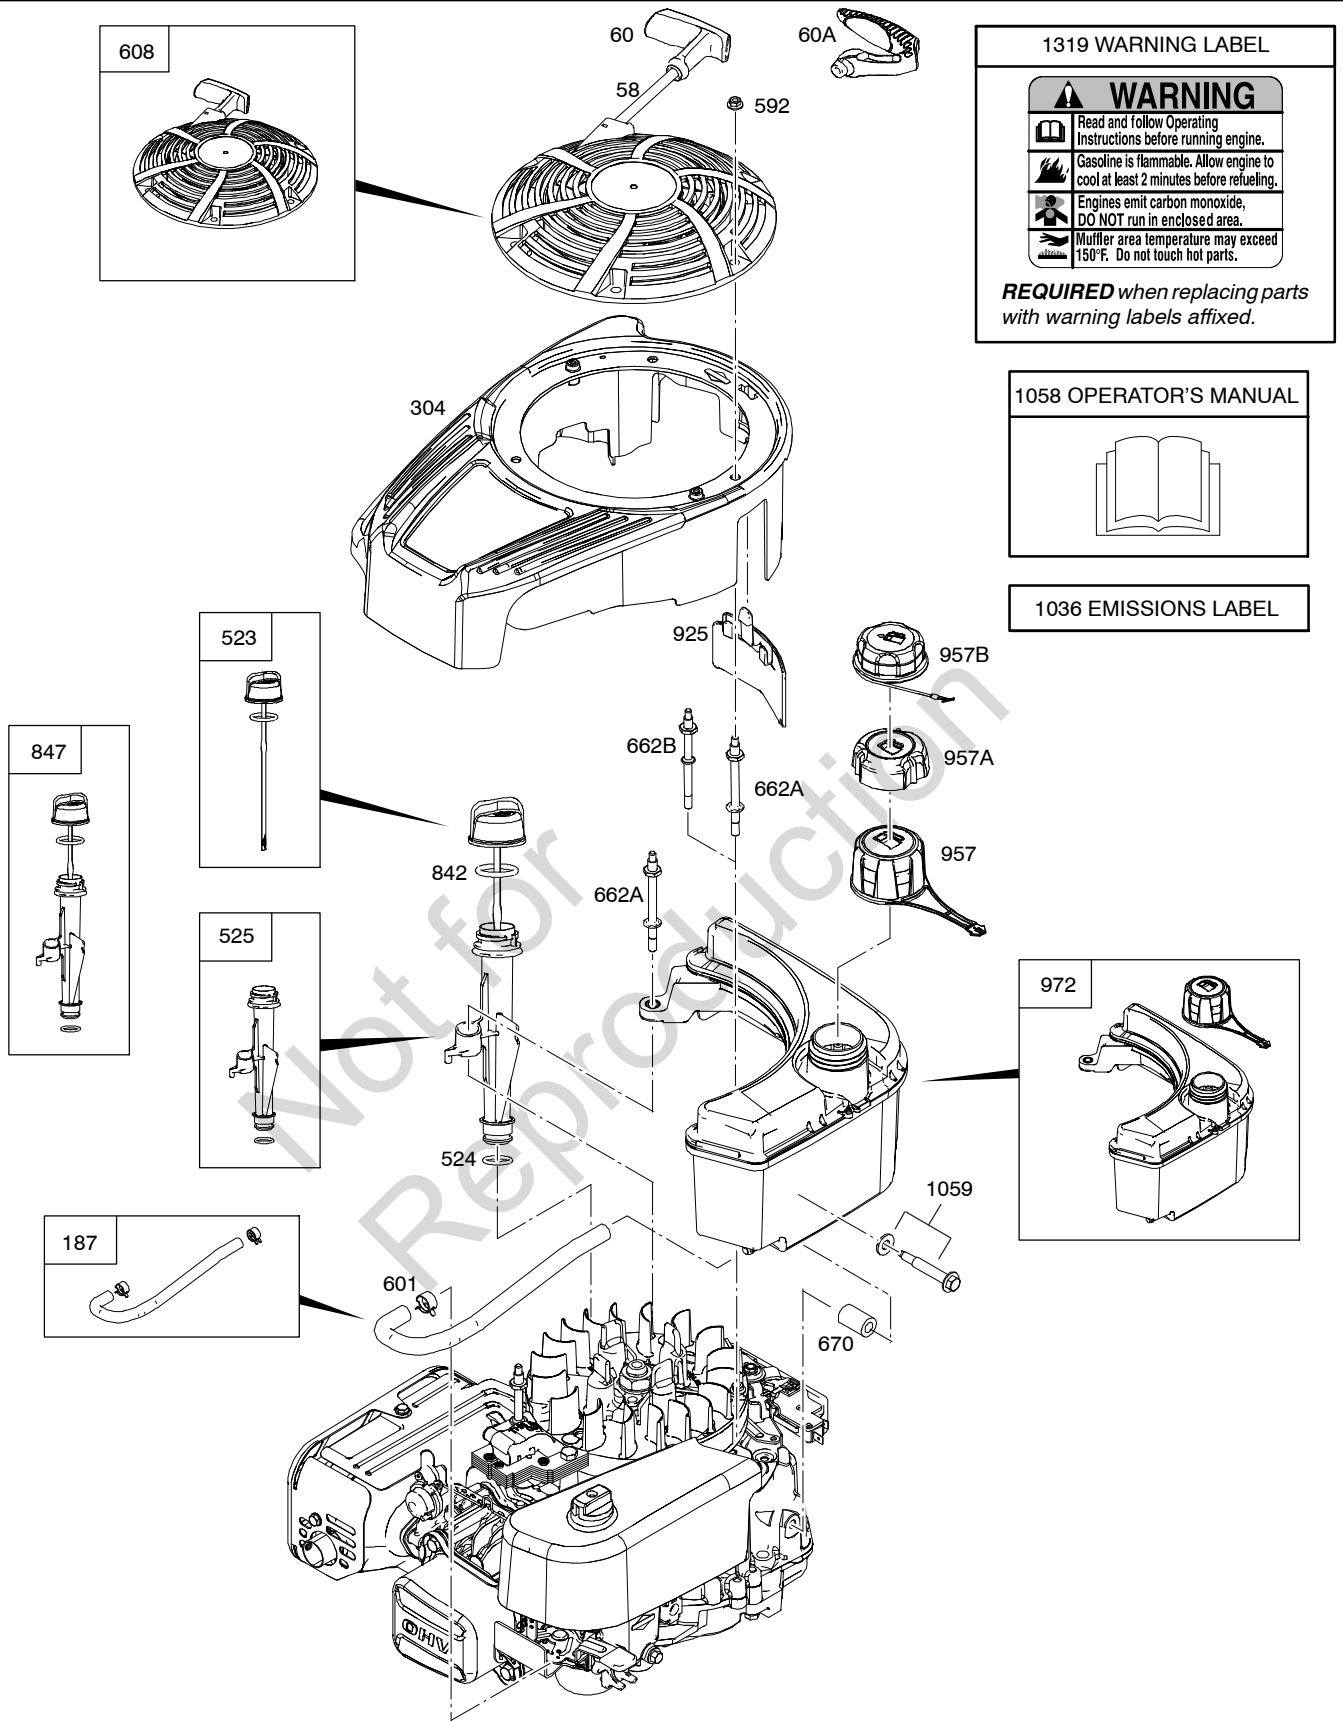

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
58	697316	Rope-Starter (Cut To Required Length)	1036		Label-Emissions (Available From A Briggs & Statton Authorized Dealer)			
60	281434S	Grip-Starter Rope	1058	278415	Manual-Operator's			
60A	795426	Grip-Starter Rope	1059	793471	Kit-Screw/Washer			
187	796491	Line-Fuel (Formed Hose)	1319	794467	Label-Warning			
304	796692	Housing-Blower (Rewind Start) Used on Type No(s). 0119, 0120, 0121, 0123, 0124, 0126, 0127, 0693, 0783, 0809, 0809.						
304	796693	Housing-Blower (Electric Start) Used on Type No(s). 0122, 1267, 1310, 1326.						
523	796503	Dipstick						
524	692296	Seal-Dipstick Tube						
525	796502	Tube-Dipstick						
592	793481	Nut (Rewind Starter)						
601	791850	Clamp-Hose						
608	796497	Starter-Rewind						
662A	793479	Stud (Rewind Starter)						
662B	797002	Stud (Rewind Starter) (Used With Alternator Only)						
670	793485	Spacer-Fuel Tank						
842	691031	Seal-O Ring (Dipstick Tube)						
847	796501	Dipstick/Tube Assembly						
925	796531	Cover-Linkage Used on Type No(s). 0119, 0120, 0121, 0124, 0126, 0127, 1326.						
957	796577	Cap-Fuel Tank (EVAP)						
957A	692046	Cap-Fuel Tank (Plastic)						
957B	699985	Cap-Fuel Tank (Fresh Start)						
972	796489	Tank-Fuel (EVAP)						


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

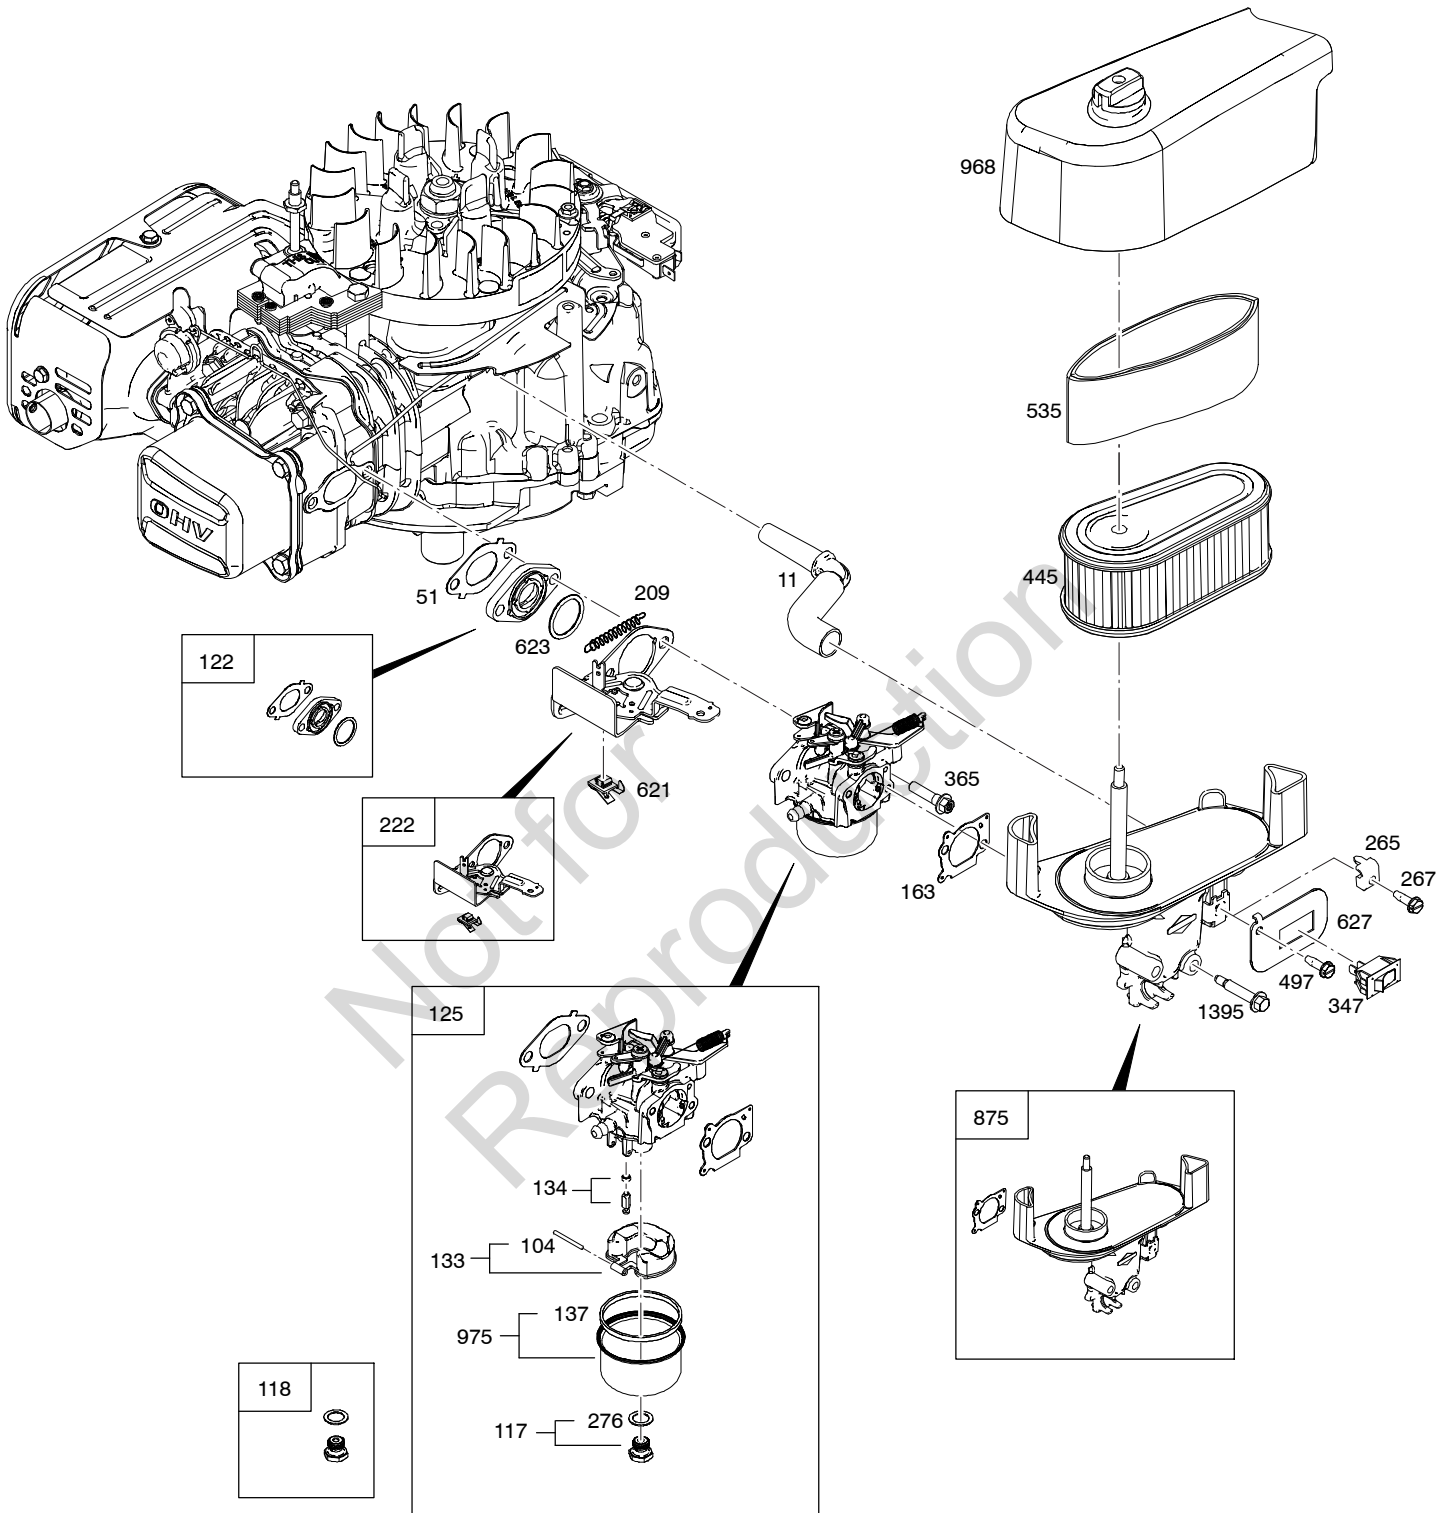

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
11	796478	Tube-Breather	623	793628	Seal-O Ring			
51	796596	Gasket-Intake	875	796492	Base-Air Cleaner			
104	691242	Pin-Float Hinge	968	796493	Cover-Air Cleaner			
117	697355	Jet-Main (Standard)	975	796611	Bowl-Float			
118	494870	Jet-Main (High Altitude)	1395	690349	Screw (Air Cleaner Base to Carburetor)			
122	796595	Spacer-Carburetor						
125	796608	Carburetor						
133	398187	Float-Carburetor						
134	398188	Kit-Needle/Seat						
137	796610	Gasket-Float Bowl						
163	691894	Gasket-Air Cleaner						
209	793604	Spring-Governor Used on Type No(s). 0119, 0120, 0121, 0124, 0126, 0127.						
209	796483	Spring-Governor Used on Type No(s). 0119, 0809.						
209	796484	Spring-Governor Used on Type No(s). 0123, 0693, 0783, 0809, 1267, 1310, 1326.						
209	796926	Spring-Governor Used on Type No(s). 0122.						
222	796482	Bracket-Control (Manual Friction, Remote, & Fixed Speed Control)						
265	690798	Clamp-Casing						
267	691044	Screw (Casing Clamp)						
276	271716	Washer-Sealing						
347	795333	Switch-Rocker Used on Type No(s). 0119, 0120, 0121, 0124, 0126, 0127.						
365	793458	Screw (Carburetor)						
445	795066	Filter-Air Cleaner Cartridge						
497	691044	Screw (Stopswitch Bracket) Used on Type No(s). 0119, 0120, 0121, 0124, 0126, 0127.						
535	796254	Filter-Air Cleaner Foam						
621	692310	Switch-Stop						
627	796702	Bracket-Stopswitch Used on Type No(s). 0119, 0120, 0121, 0124, 0126, 0127.						

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

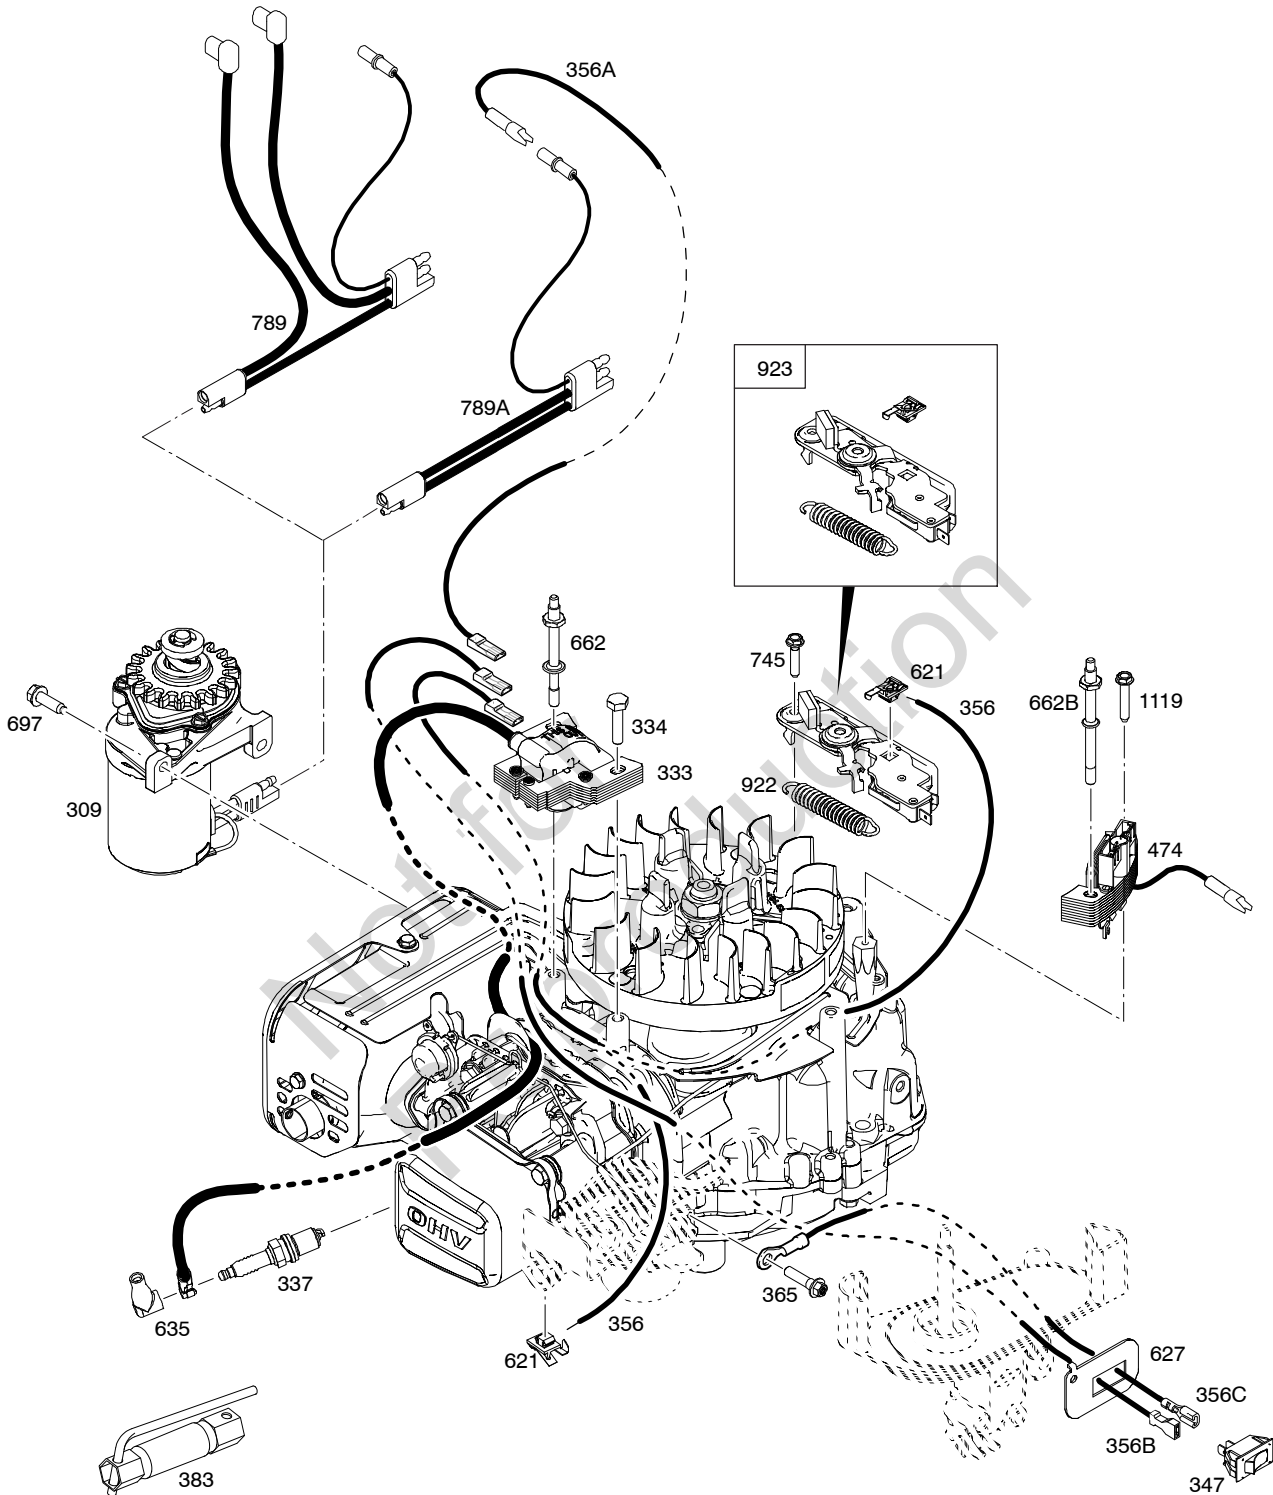


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
309	796842	Motor-Starter Used on Type No(s). 0122, 1267, 1310, 1326.	635	66538S	Boot-Spark Plug			
			662	796537	Stud (Rewind Starter)			
333	796499	Armature-Magneto Used on Type No(s). 0122, 0123, 0693, 0783, 0809, 1267, 1310, 1326.	662B	797002	Stud (Rewind Starter) (Used With Alternator Only)			
			697	691127	Screw (Drive Cap) Used on Type No(s). 0122, 1267, 1310, 1326.			
333	796500	Armature-Magneto Used on Type No(s). 0119, 0120, 0121, 0124, 0126, 0127.	745	698557	Screw (Brake) Used on Type No(s). 0122, 0123, 0693, 0783, 0809, 1267, 1310.			
334	793454	Screw (Magneto Armature)	789	792685	Harness-Wiring Used on Type No(s). 0122, 1267, 1310.			
337	692051	Plug-Spark Used on Type No(s). 0120, 0121, 0122, 0123, 0124, 0126, 0127, 0693, 0783, 1267, 1310, 1326.	789A	696546	Harness-Wiring Used on Type No(s). 1326.			
337	692720	Plug-Spark Used on Type No(s). 0119, 0809.	922	692135	Spring-Brake Used on Type No(s). 0122, 0123, 0693, 0783, 0809, 1267, 1310.			
347	795333	Switch-Rocker Used on Type No(s). 0119, 0120, 0121, 0124, 0126, 0127.	923	796635	Brake Used on Type No(s). 0122, 0123, 0693, 0783, 0809, 1267, 1310.			
356	692390	Wire-Stop Used on Type No(s). 0122, 0123, 0693, 0783, 0809, 1267, 1310.	1119	794100	Screw (Alternator) Used on Type No(s). 0122.			
356A	692151	Wire-Stop Used on Type No(s). 1326.						
356B	692602	Wire-Stop Used on Type No(s). 0119, 0120, 0121, 0124, 0126, 0127.						
356C	695630	Wire-Stop Used on Type No(s). 0119, 0120, 0121, 0124, 0126, 0127.						
365	793458	Screw (Carburetor)						
383	19374S	Wrench-Spark Plug						
474	794103	Alternator Used on Type No(s). 0122.						
621	692310	Switch-Stop						
627	796702	Bracket-Stopswitch Used on Type No(s). 0119, 0120, 0121, 0124, 0126, 0127.						

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.


11P900

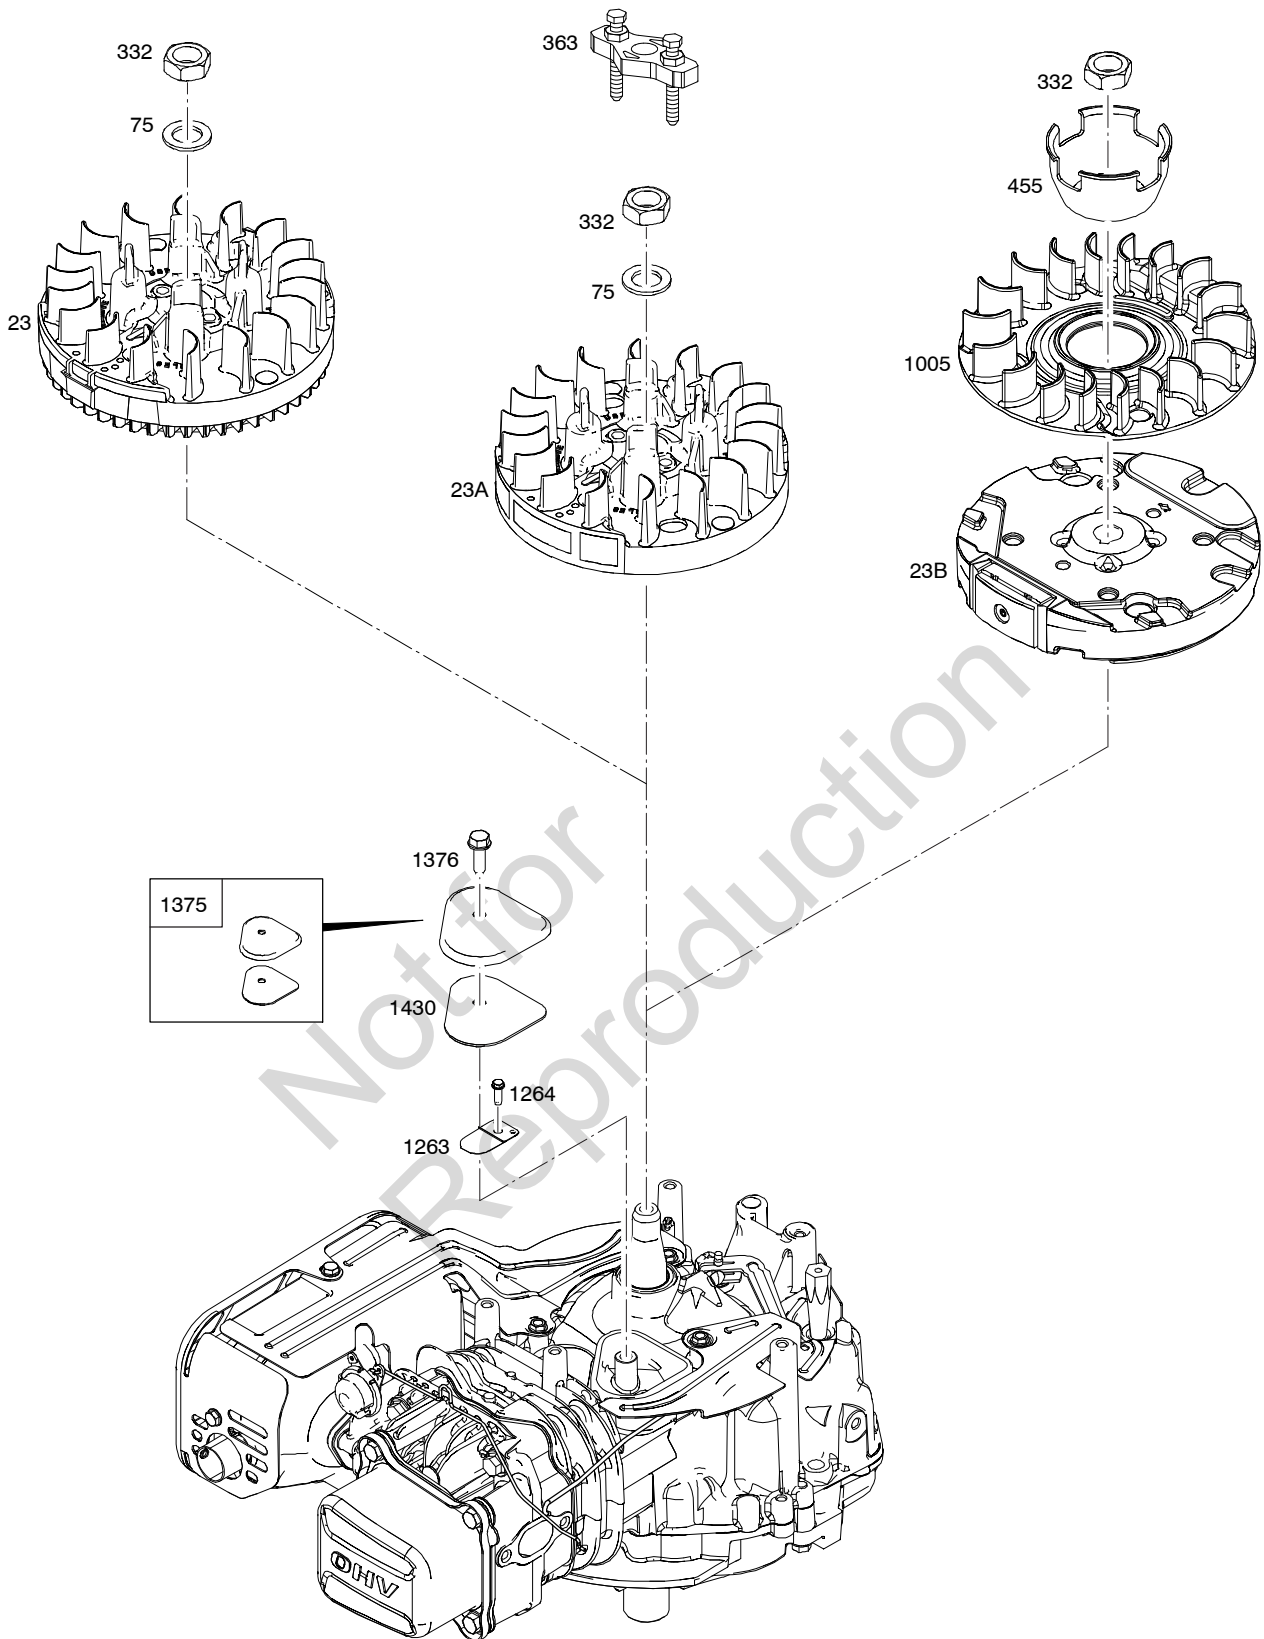

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
23	793619	Flywheel (Aluminum) Used on Type No(s). 0122, 1267, 1310, 1326.						
23A	793489	Flywheel (Aluminum) Used on Type No(s). 0123, 0693, 0783, 0809.						
23B	796621	Flywheel (Cast Iron) Used on Type No(s). 0119, 0120, 0121, 0124, 0126, 0127.						
75	691736	Washer (Flywheel) Used on Type No(s). 0122, 0123, 0693, 0783, 0809, 1267, 1310, 1326.						
332	690662	Nut (Flywheel)						
363	19069	Puller-Flywheel						
455	796615	Cup-Flywheel Used on Type No(s). 0119, 0120, 0121, 0124, 0126, 0127.						
1005	796614	Fan-Flywheel Used on Type No(s). 0119, 0120, 0121, 0124, 0126, 0127.						
1263	697124	Reed-Breather						
1264	793453	Screw (Breather Reed)						
1375	796476	Cover-Breather/Reed						
1376	794451	Screw (Breather/Reed Cover)						
1430	796477	Gasket-Breather/Reed						


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

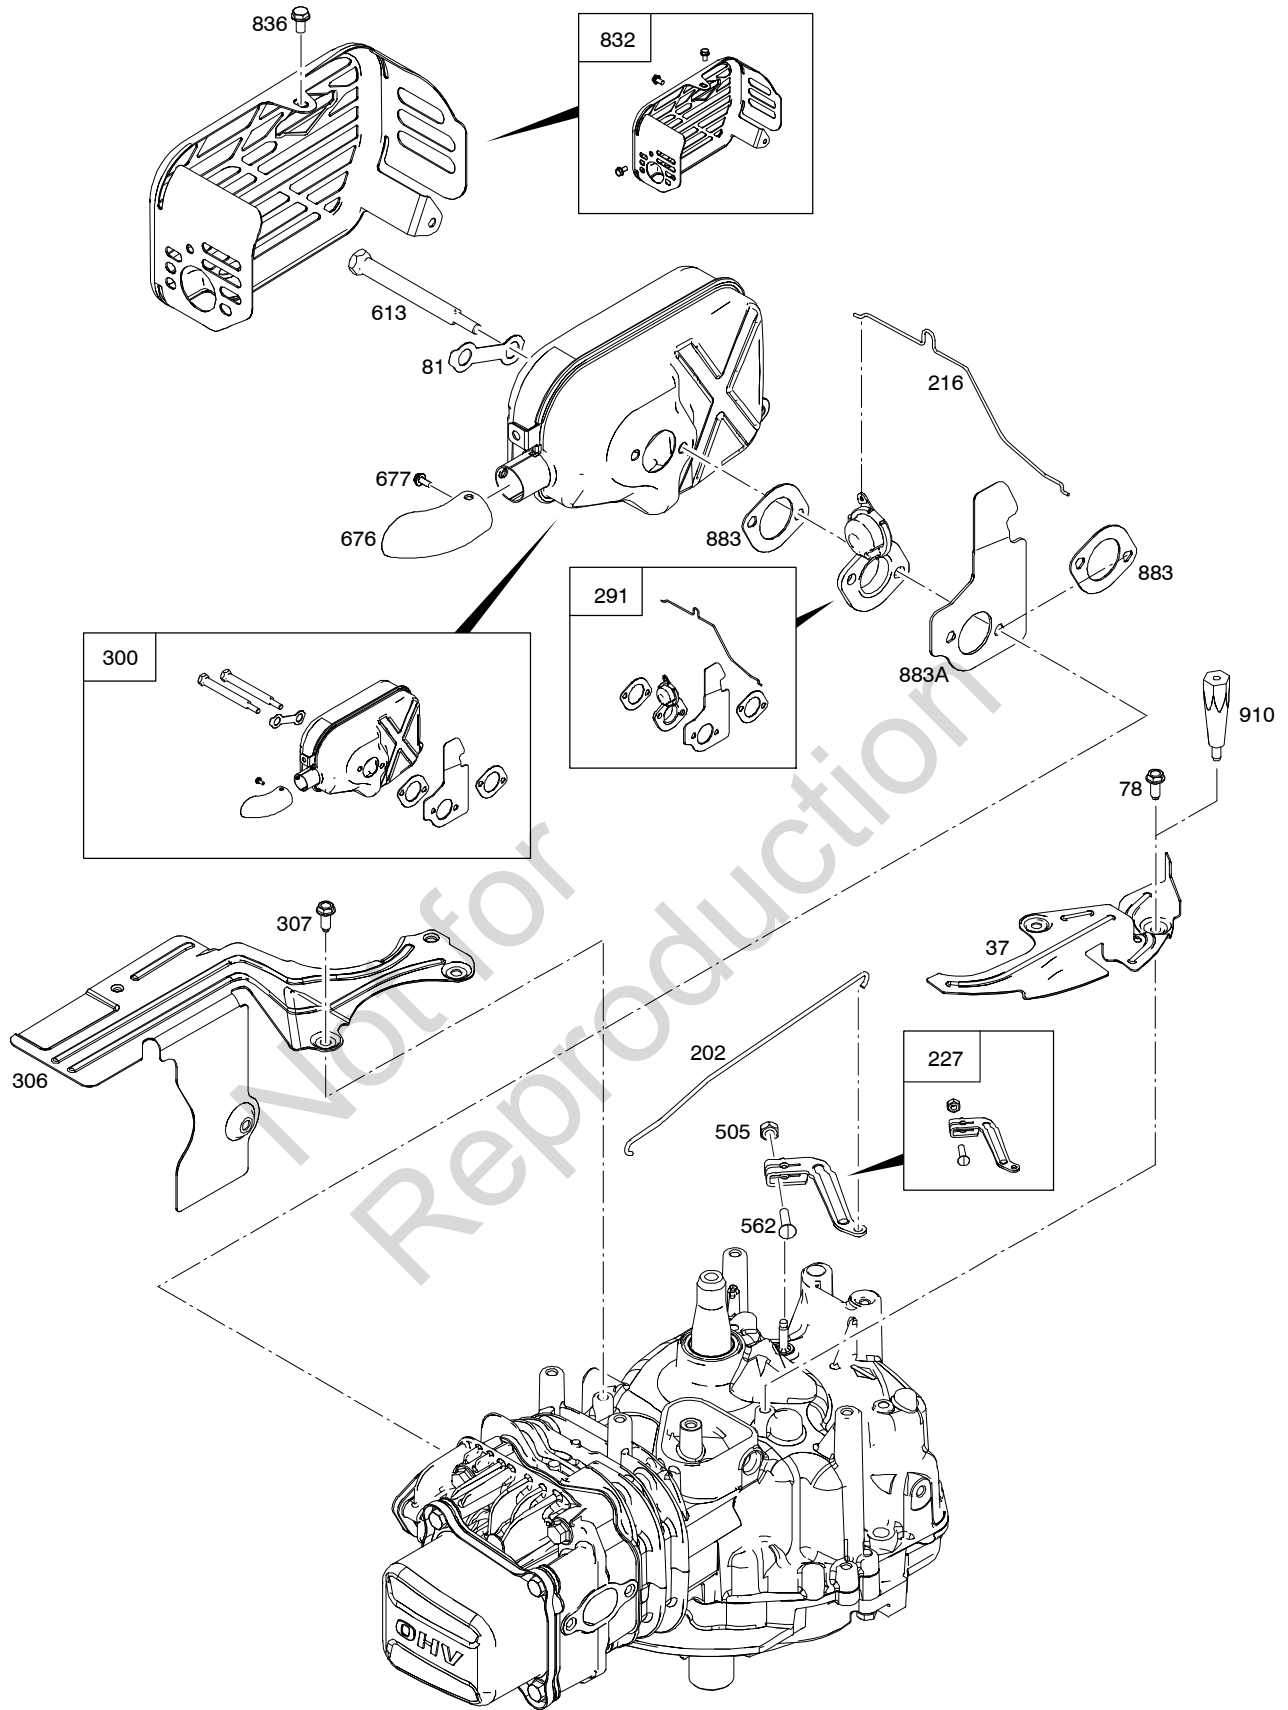

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
37	796536	Guard-Flywheel						
78	793480	Screw (Flywheel Guard)						
81	691740	Lock-Muffler Screw						
202	796657	Link-Mechanical Governor						
216	796485	Link-Choke						
227	796487	Lever-Governor Control						
291	796486	Thermostat						
300	796495	Muffler-Exhaust						
306	796534	Shield-Cylinder Used on Type No(s). 0119, 0120, 0121, 0123, 0124, 0126, 0127, 0693, 0783, 0809.						
306	796535	Shield-Cylinder Used on Type No(s). 0122, 1267, 1310, 1326.						
307	793480	Screw (Cylinder Shield)						
505	793515	Nut (Governor Control Lever)						
562	793514	Bolt (Governor-Control Lever)						
613	796496	Screw (Muffler)						
676	692010	Deflector-Muffler						
677	690661	Screw (Muffler Deflector)						
832	796494	Guard-Muffler Used on Type No(s). 0119, 0120, 0121, 0122, 0123, 0124, 0126, 0127, 0809.						
836	793500	Screw (Muffler Guard) Used on Type No(s). 0119, 0120, 0121, 0122, 0123, 0124, 0126, 0127, 0809.						
883	793497	Gasket-Exhaust						
883A	796677	Gasket-Exhaust						
910	796498	Stud (Alternator) Used on Type No(s). 0122.						


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

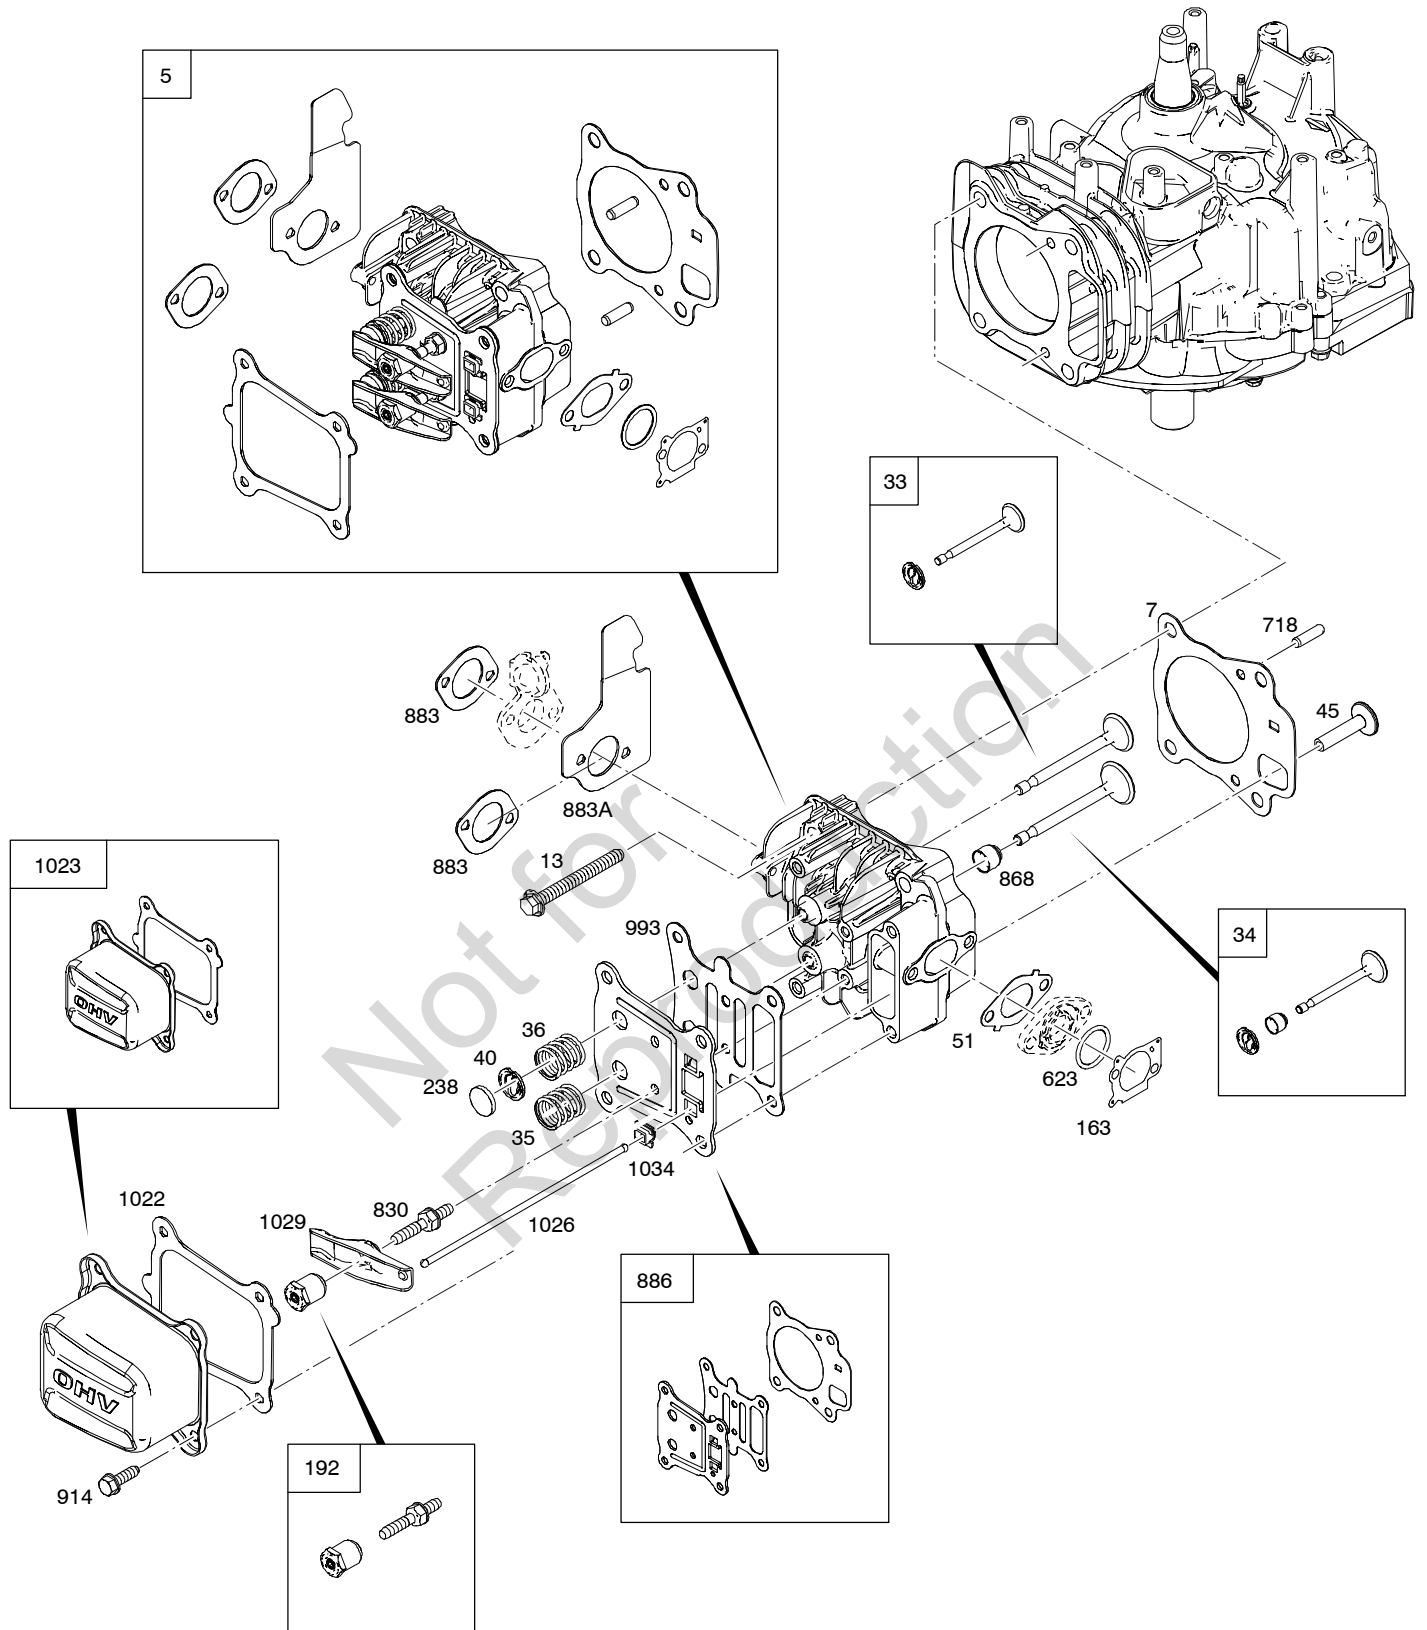

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
5	796471	Head-Cylinder						
7	796475	Gasket-Cylinder Head						
13	793451	Screw (Cylinder Head)						
33	499642	Valve-Exhaust						
34	795443	Valve-Intake						
35	691304	Spring-Valve (Intake)						
36	691304	Spring-Valve (Exhaust)						
40	692194	Retainer-Valve						
45	690977	Tappet-Valve						
51	796596	Gasket-Intake						
163	691894	Gasket-Air Cleaner						
192	796631	Adjuster-Rocker Arm						
238	691300	Cap-Valve						
623	793628	Seal-O Ring (Carburetor Spacer)						
718	690959	Pin-Locating						
830	796472	Stud-Rocker Arm						
868	795440	Seal-Valve						
883	793497	Gasket-Exhaust						
883A	796677	Gasket-Exhaust						
886	796474	Gasket Kit-Cylinder Head Plate						
914	794451	Screw (Rocker Arm Cover)						
993	796473	Gasket-Cylinder Head Plate						
1022	796480	Gasket-Rocker Cover						
1023	796479	Cover-Rocker Arm						
1026	796481	Rod-Push						
1029	691230	Arm-Rocker						
1034	691343	Guide-Push Rod						


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

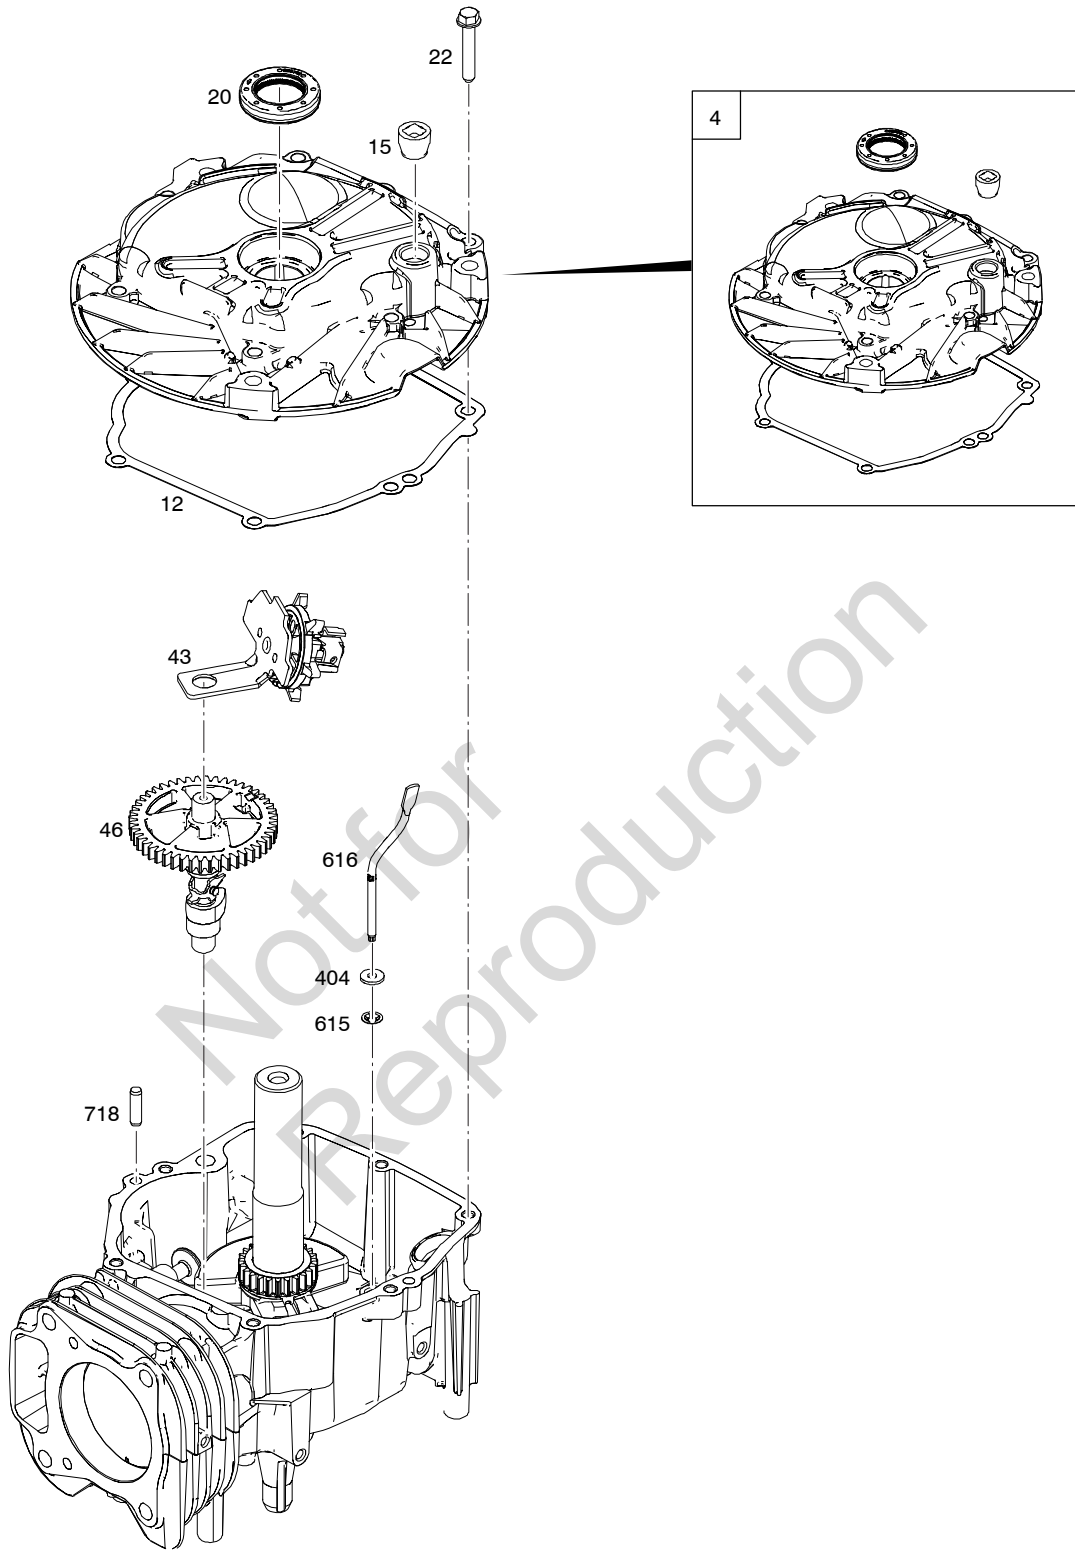

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
4	493279	Sump-Engine Used on Type No(s). 0119, 0120, 0122, 0123, 0124, 0126, 0127, 0693, 0783, 0809, 1267, 1310, 1326.						
4	498983	Sump-Engine Used on Type No(s). 0121.						
12	692232	Gasket-Crankcase						
15	691680	Plug-Oil Drain (Square Socket)						
20	399781S	Seal-Oil (PTO Side)						
22	691092	Screw (Crankcase Cover/Sump)						
43	796650	Slinger-Governor/Oil Used on Type No(s). 0122, 0123, 0693, 0783, 0809, 1267, 1310, 1326.						
43	796651	Slinger-Governor/Oil Used on Type No(s). 0119, 0120, 0121, 0124, 0126, 0127.						
46	694039	Camshaft Used on Type No(s). 0119, 0120, 0121, 0122, 0123, 0124, 0126, 0127, 0693, 0783, 0809, 1267, 1310, 1326.						
404	690272	Washer (Governor Crank)						
615	796674	Retainer-Governor Shaft						
616	796488	Crank-Governor						
718	690959	Pin-Locating						




Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

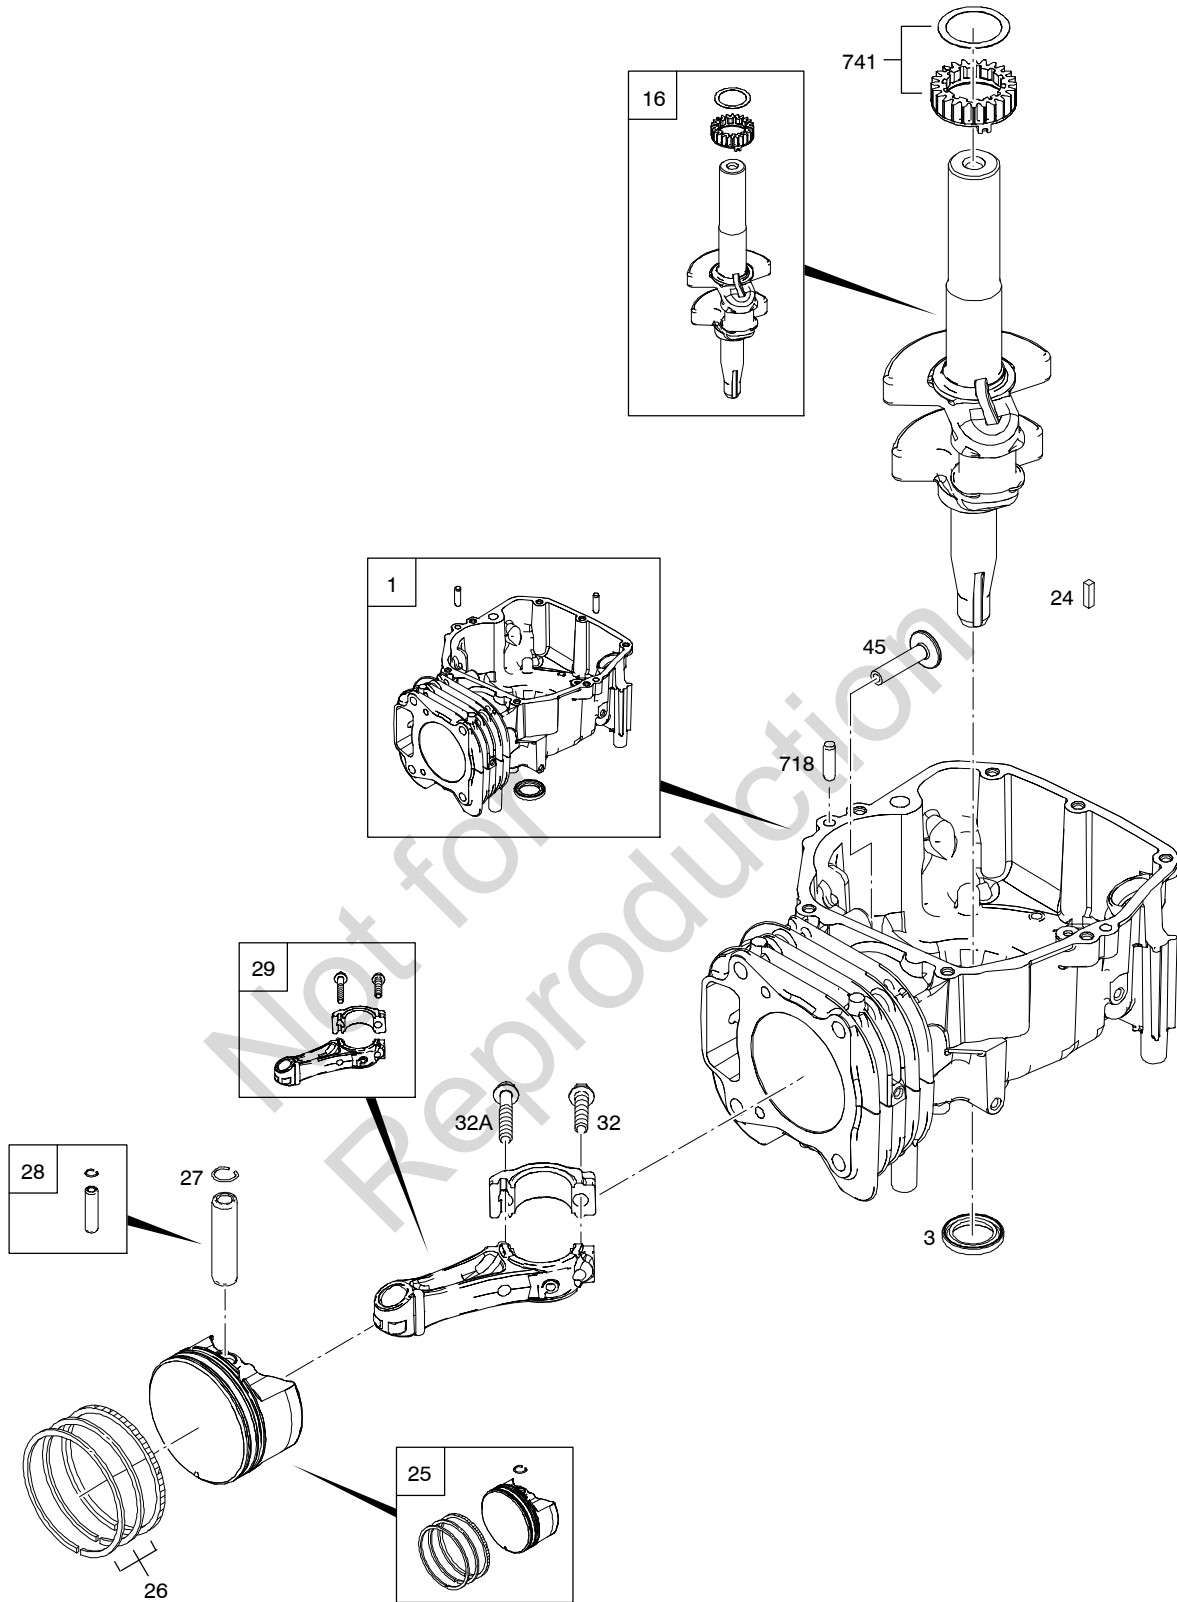

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	796510	Cylinder Assembly						
3	299819S	Seal-Oil (Magneto Side)						
16	796467	Crankshaft Used on Type No(s). 0120, 0121, 0124, 0126, 0127.						
16	796468	Crankshaft Used on Type No(s). 0122, 0123, 0693, 0783, 1267, 1310, 1326.						
16	796469	Crankshaft Used on Type No(s). 0119, 0809.						
24	222698S	Key-Flywheel						
25	796643	Piston Assembly (Standard)						
25	796644	Piston Assembly (.020" Oversize)						
26	796645	Ring Set (Standard)						
26	796646	Ring Set (.020" Oversize)						
27	691588	Lock-Piston Pin						
28	298909	Pin-Piston						
29	796470	Rod-Connecting						
32	691664	Screw (Connecting Rod)						
32A	695759	Screw (Connecting Rod)						
45	690977	Tappet-Valve						
718	690959	Pin-Locating						
741	795755	Gear-Timing						

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

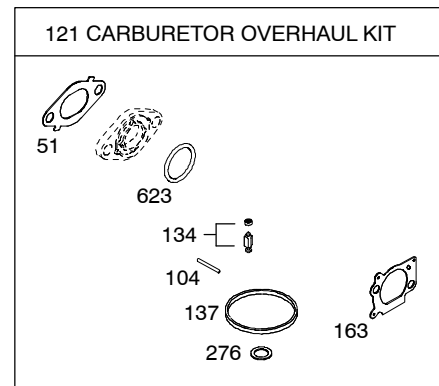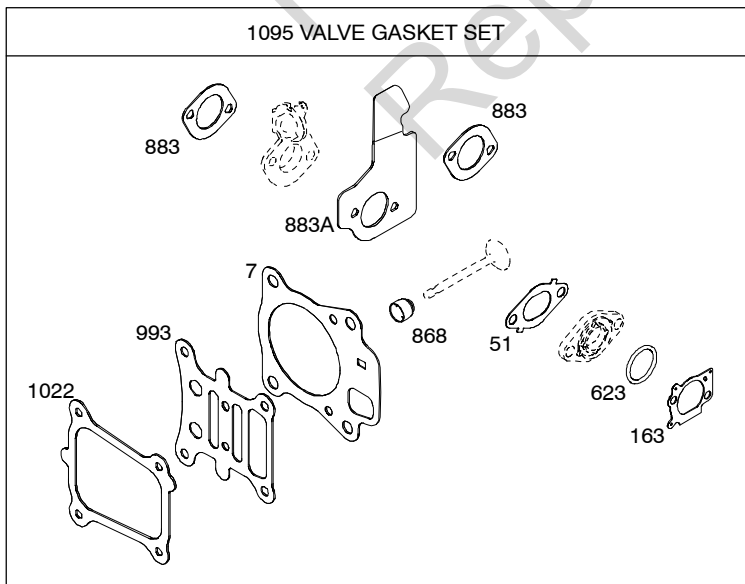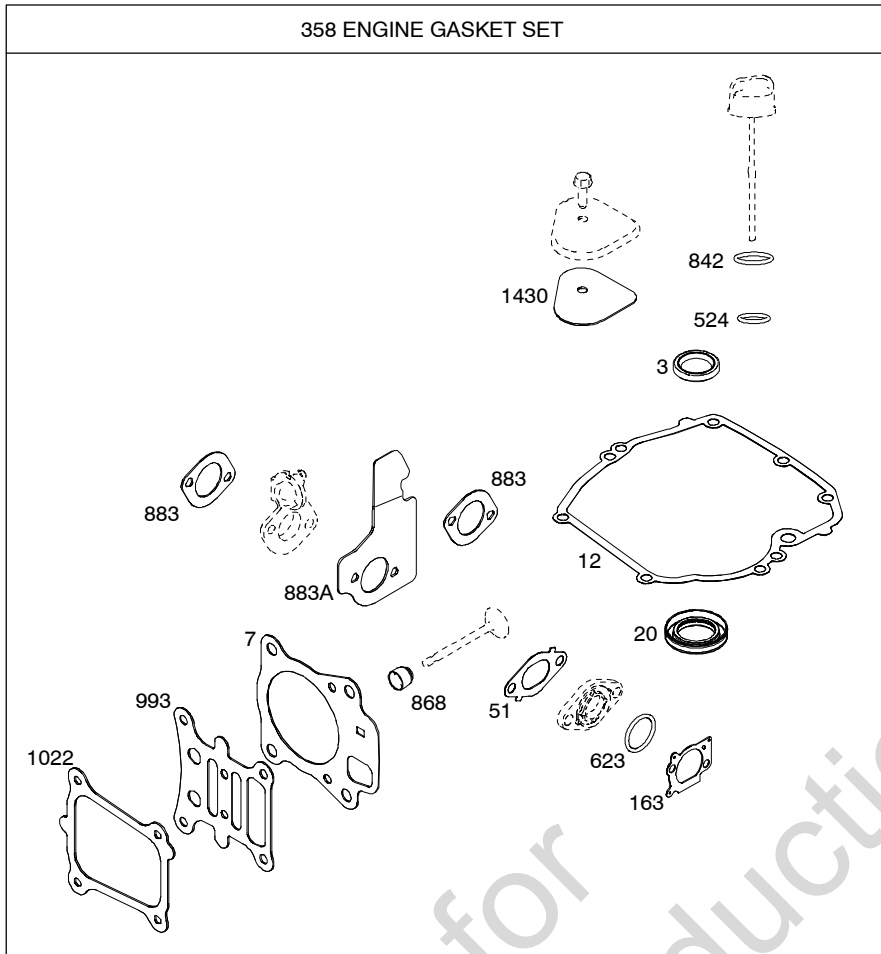

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
3	299819S	Seal-Oil (Magneto Side)						
7	796475	Gasket-Cylinder Head						
12	692232	Gasket-Crankcase						
20	399781S	Seal-Oil (PTO Side)						
51	796596	Gasket-Intake						
104	691242	Pin-Float Hinge						
121	796612	Kit-Carburetor Overhaul						
134	398188	Kit-Needle/Seat						
137	796610	Gasket-Float Bowl						
163	691894	Gasket-Air Cleaner						
276	271716	Washer-Sealing						
358	796661	Gasket Set-Engine						
524	692296	Seal-Dipstick Tube (Lower)						
623	793628	Seal-O Ring (Carburetor Spacer)						
842	691031	Seal-O Ring (Dipstick Tube) (Upper)						
868	795440	Seal-Valve (Exhaust)						
883	793497	Gasket-Exhaust						
883A	796677	Gasket-Exhaust						
993	796473	Gasket-Cylinder Head Plate						
1022	796480	Gasket-Rocker Cover						
1095	796662	Gasket Set-Valve						
1430	796477	Gasket-Breather/Reed						

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

Not for
Reproduction

