

 


Parts Manual

Mfg. No: 121R02-0002-F1

Model Components	Page
Air Cleaner.....	4
Alternator, Electric Starter, Ignition.....	6
Blower Housing, Cover/Guards, Flywheel, Rewind Starter.....	8
Camshaft, Crankshaft, Cylinder, Operator's Manual, Piston/Rings/Connecting Rod, Warning Label.....	10
Carburetor, Carburetor Overhaul Kit.....	12
Controls, Governor Spring, Thermostat.....	14
Cylinder Head, Gasket Set-Valves, Valves.....	16
Exhaust System.....	18
Fuel Supply, Lubrication.....	20
Gasket Set-Engine, Sump.....	22


Not For
Reproduction

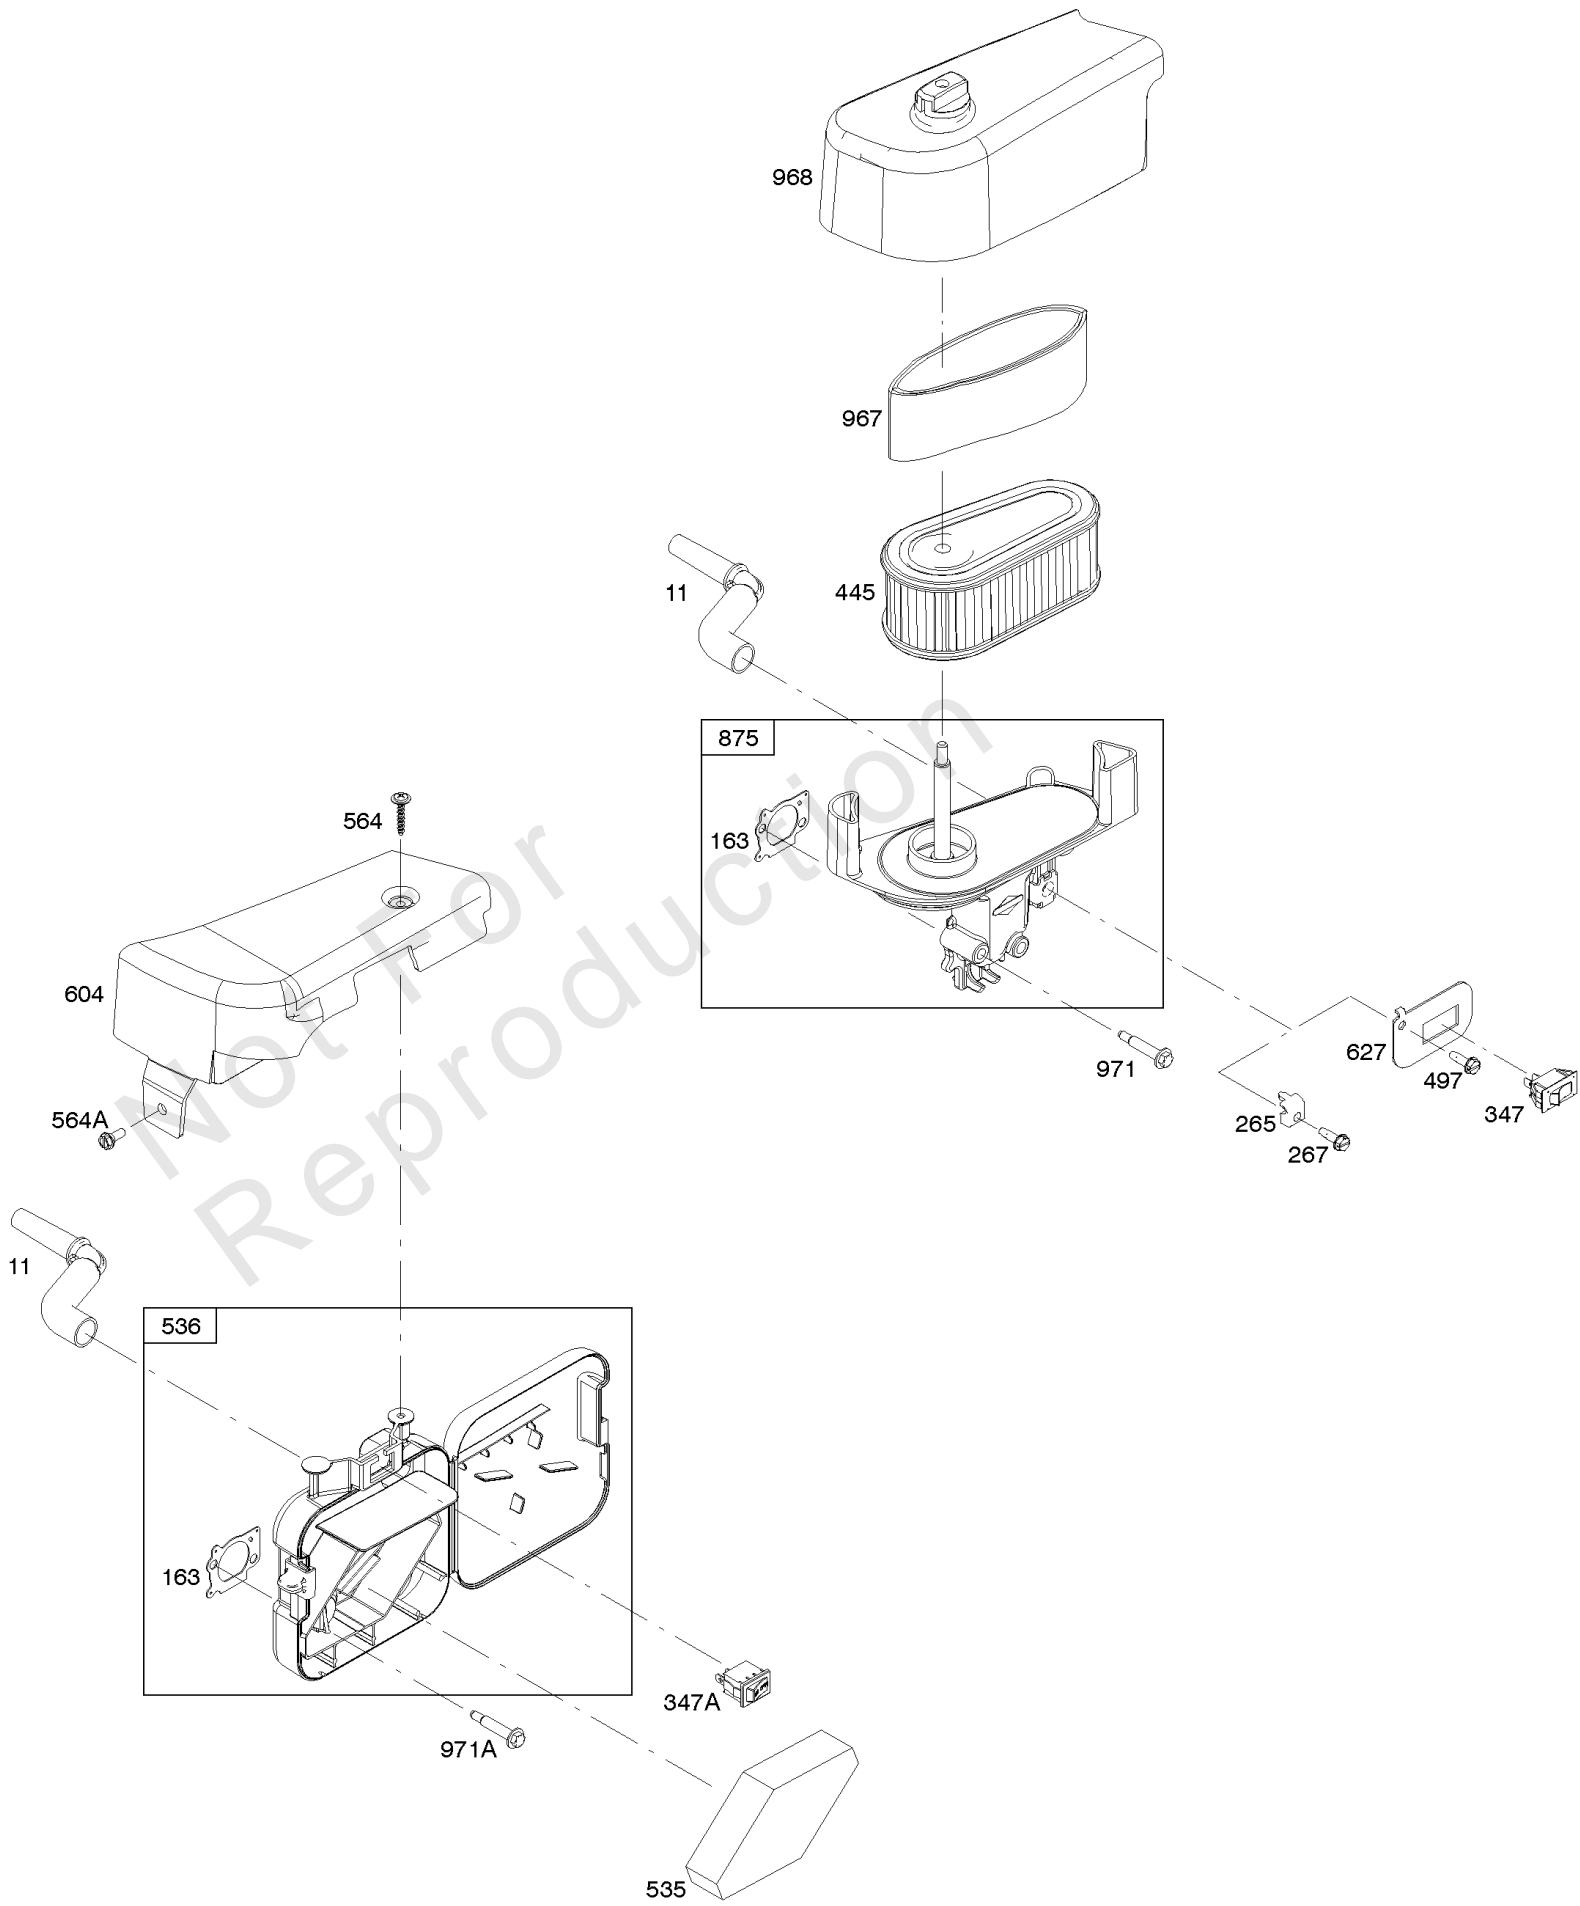

Air Cleaner

REF NO	PART NO	QTY	DESCRIPTION
11	796478		Tube-Breather
163	691894		Gasket-Air Cleaner
265	691024		CLAMP, Casing
267	691044		SCREW -(Casing Clamp)
347A	798939		Switch-Rocker
445	795066		Filter-A/C Cartridge
535	797301		Filter-Air Cleaner Foam
536	799025		Cleaner-Air
564	690351		SCREW -(Control Cover)
564A	799026		Screw -(Control Cover)
604	799024		Cover-Control
875	796492		Base-Air Cleaner
967	796254		Filter-Pre Cleaner
968	796493		Cover-Air Cleaner
971A	798294		Screw -(Air Cleaner Base to Carburetor/Throttle Body)

 
Not For
Reproduction

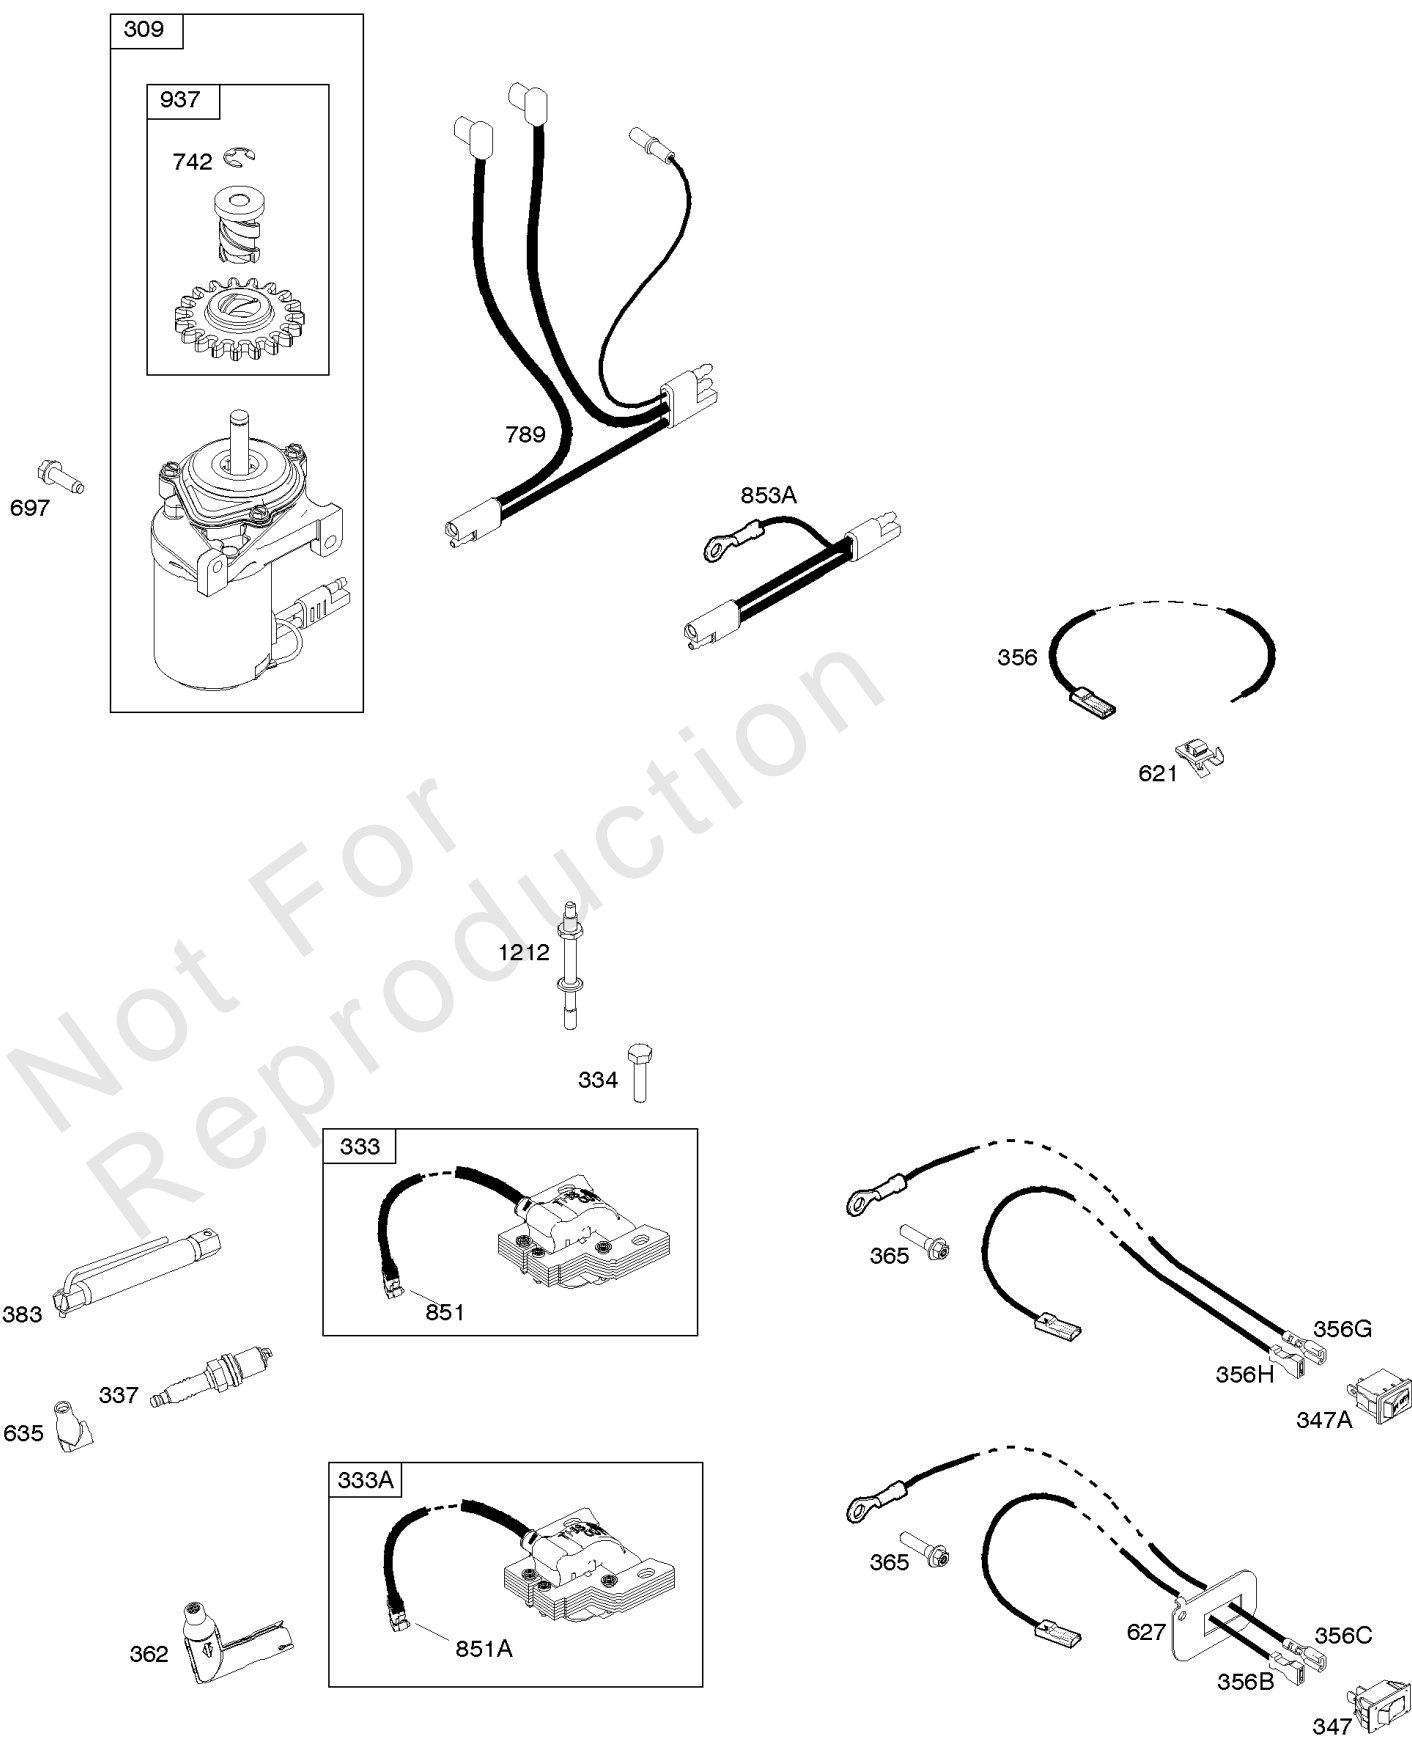

Alternator, Electric Starter, Ignition

REF NO	PART NO	QTY	DESCRIPTION
333	796499		Armature-Magneto -(90 Degree Ignition Terminal)
334	793454		Screw -(Magneto Armature)
337	594264		Plug-Spark
347A	798939		Switch-Rocker
356G	798942		Wire-Stop
356H	798943		Wire-Stop
362	799646		Shield-Spark Plug
365	699484		Screw -(Carburetor)
383	19576S		WRENCH, Spark Plug
621	692310		Switch-Stop
635	66538S		BOOT, Spark Plug
697	691127		SCREW -(Starter Motor) (Drive Cap)
742	93941		RETAINER, E Ring
851	493880S		TERMINAL, Spark Plug
851A	692424		Terminal-Spark Plug
853A	695897		Adapter-Wire
1212	796537		Stud -(Blower Housing)

 Not For
Reproduction

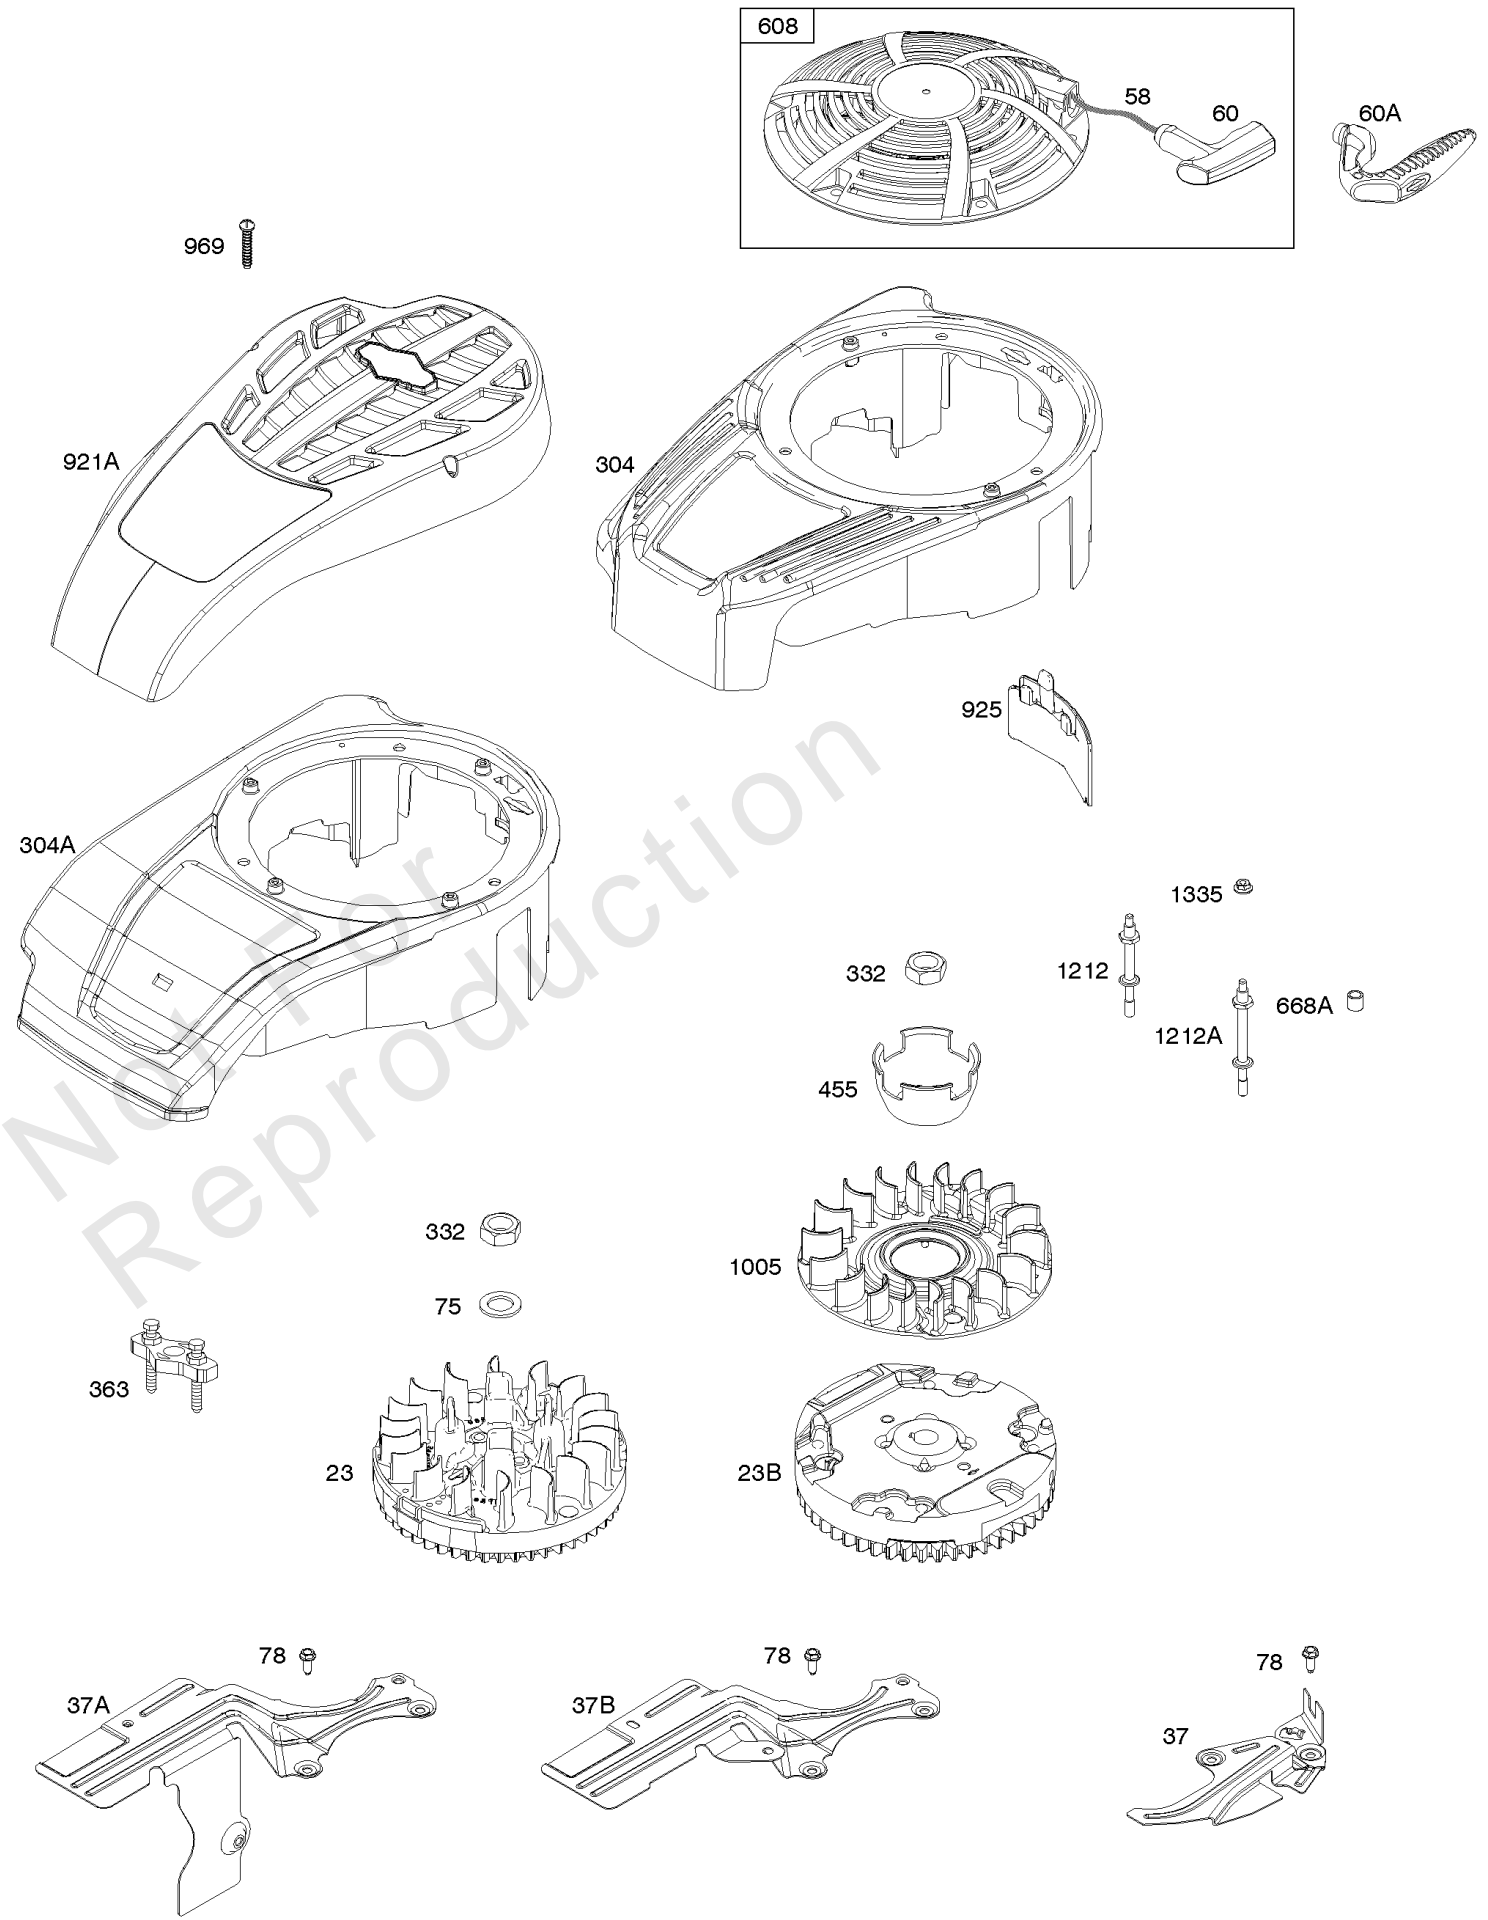

Blower Housing, Cover/Guards, Flywheel, Rewind Starter

REF NO	PART NO	QTY	DESCRIPTION
23B	796621		Flywheel -(Cast Iron)
37B	799155		Guard-Flywheel
58	697316		Rope-Starter -(88-5/8" Long)(Cut to Required Length)
60	281434S		Grip-Starter Rope
60A	799716		Grip-Starter Rope
75	691736		Washer -(Flywheel)
78	793480		SCREW -(Flywheel Guard)
304	796692		Housing-Blower -(Rewind Start)
332	690662		Nut -(Flywheel)
363	19069		Puller-Flywheel
455	796615		CUP, Flywheel
608	796497		Starter-Rewind
668A	797383		Spacer
925	796531		Cover-Linkage
1005	796614		Fan-Flywheel
1212	796537		Stud -(Blower Housing)
1212A	793479		Stud -(Blower Housing)
1335	793481		Nut -(Blower Housing)

1319 WARNING LABEL

REQUIRED when replacing parts with warning labels affixed.

 
 
 
 
 
 
1319A WARNING LABEL

REQUIRED when replacing parts with warning labels affixed.

1058 OPERATOR'S MANUAL

1036 EMISSIONS LABEL



1330 REPAIR MANUAL

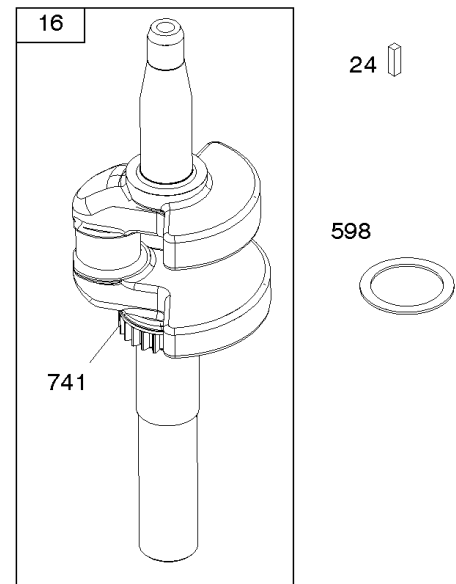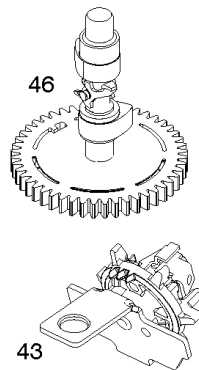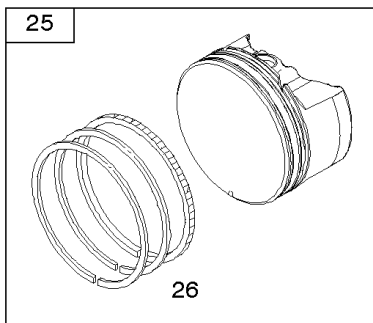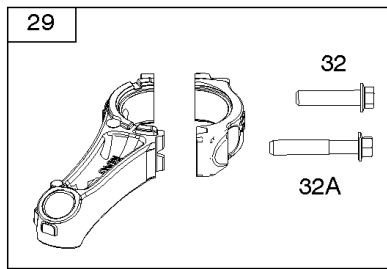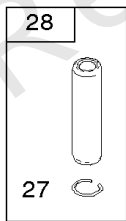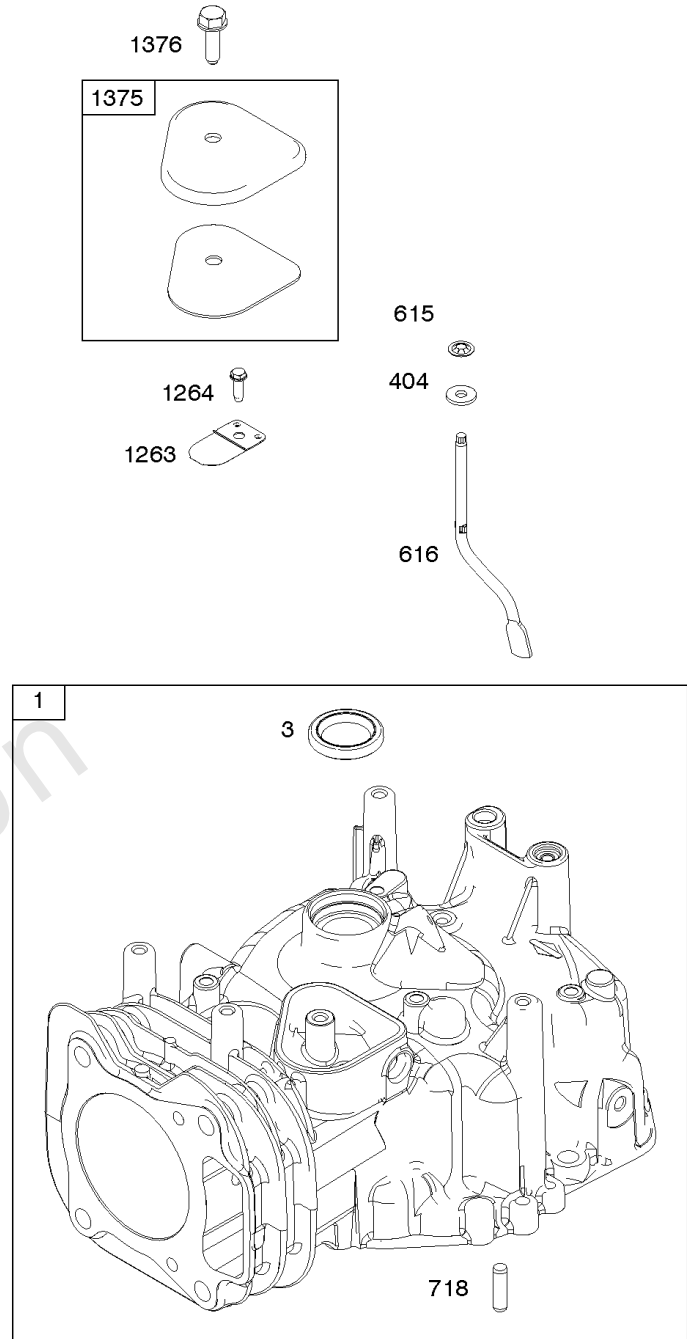

Not For Reproduction


Camshaft, Crankshaft, Cylinder, Operator's Manual, Piston/Rings/Connecting Rod,

REF NO	PART NO	QTY	DESCRIPTION
1	798947		Cylinder Assembly
3	299819S		SEAL, Oil -(Magneto Side)
16	799337		Crankshaft
24	222698S		KEY, Flywheel
25	590404		Piston Assembly -(Standard)
25	590405		Piston Assembly -(.020" Oversize)
26	590402		Ring Set -(Standard)
26	590403		Ring Set -(.020" Oversize)
27	691588		Lock-Piston Pin
28	298909		Pin-Piston
29	796470		Rod-Connecting
32	691664		Screw -(Connecting Rod)
32A	695759		Screw -(Connecting Rod)
43	593913		SLINGER, Governor/Oil
46	694039		Camshaft
404	690272		WASHER -(Governor Crank)
598	592587		Shim-End Play -(Crankshaft or Camshaft Bearing)
615	690340		RETAINER, Governor Shaft
616	798327		Crank-Governor
718	690959		PIN, Locating
741	797521		Gear-Timing
1036			Label-Emissions -(Available From A Briggs & Stratton Authorized Dealer)
1058	279946TRI		Operator's Manual
1058	279946EST		Operator's Manual
1058	279946WST		Operator's Manual
1263	697124		REED, Breather
1264	793453		SCREW -(Breather Reed)
1319	794467		LABEL, Warning
1319A	797669		LABEL, Warning
1330	279000		Repair Manual
1375	796476		Cover-Breather Reed
1376	794451		Screw -(Breather Reed Cover)

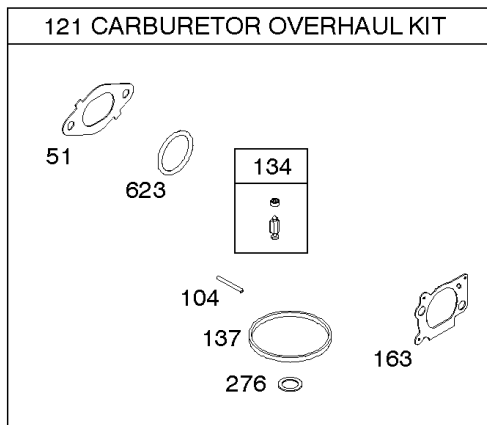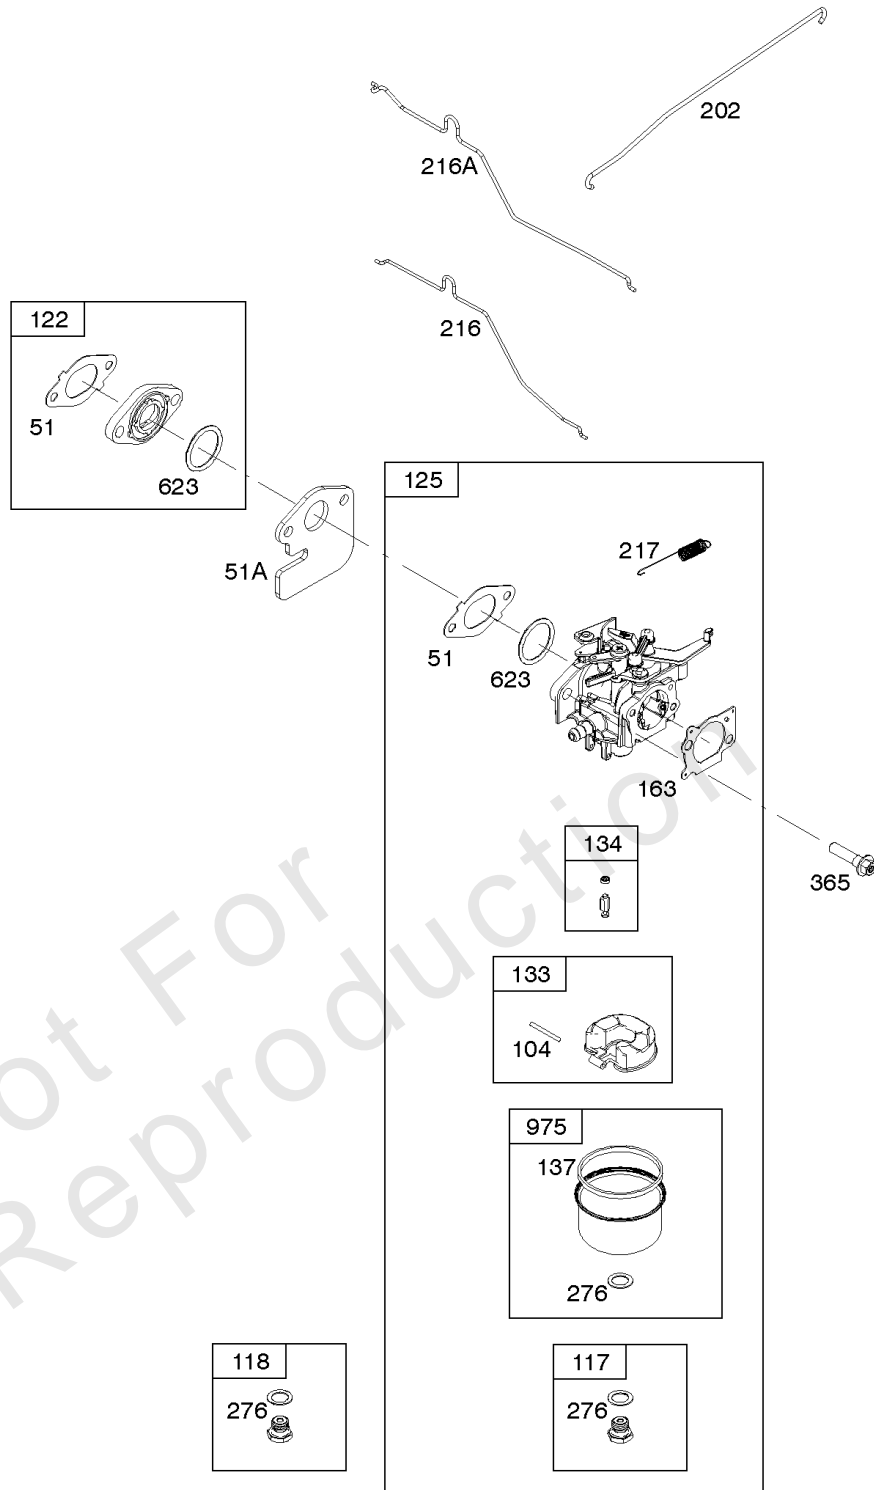  



Carburetor, Carburetor Overhaul Kit

REF NO	PART NO	QTY	DESCRIPTION
51	796596		Gasket-Intake
51A	590398		Gasket-Intake
104	797622		Pin-Float Hinge
117	798660		Jet-Main -(Standard) -Used After Code Date 14012600
117	799178		Jet-Main -(Standard) -Used Before Code Date 14012700
118	799604		Jet-Main -(High Altitude) -Used Before Code Date 14012700
118	799607		Jet-Main -(High Altitude) -Used After Code Date 14012600
121	592172		Kit-Carb Overhaul
122	796595		Spacer-Carburetor
125	593599		Carburetor
133	797626		Float-Carburetor
134	799177		Kit-Needle/Seat
137	797625		Gasket-Float Bowl
163	691894		Gasket-Air Cleaner
202	796657		Link-Mechanical Governor
216A	798944		Link-Choke
217	799179		Spring-Choke Return
276	797632		Washer-Sealing
365	699484		Screw -(Carburetor)
623	793628		Seal-O Ring -(Carburetor Spacer)
975	797631		Bowl-Float

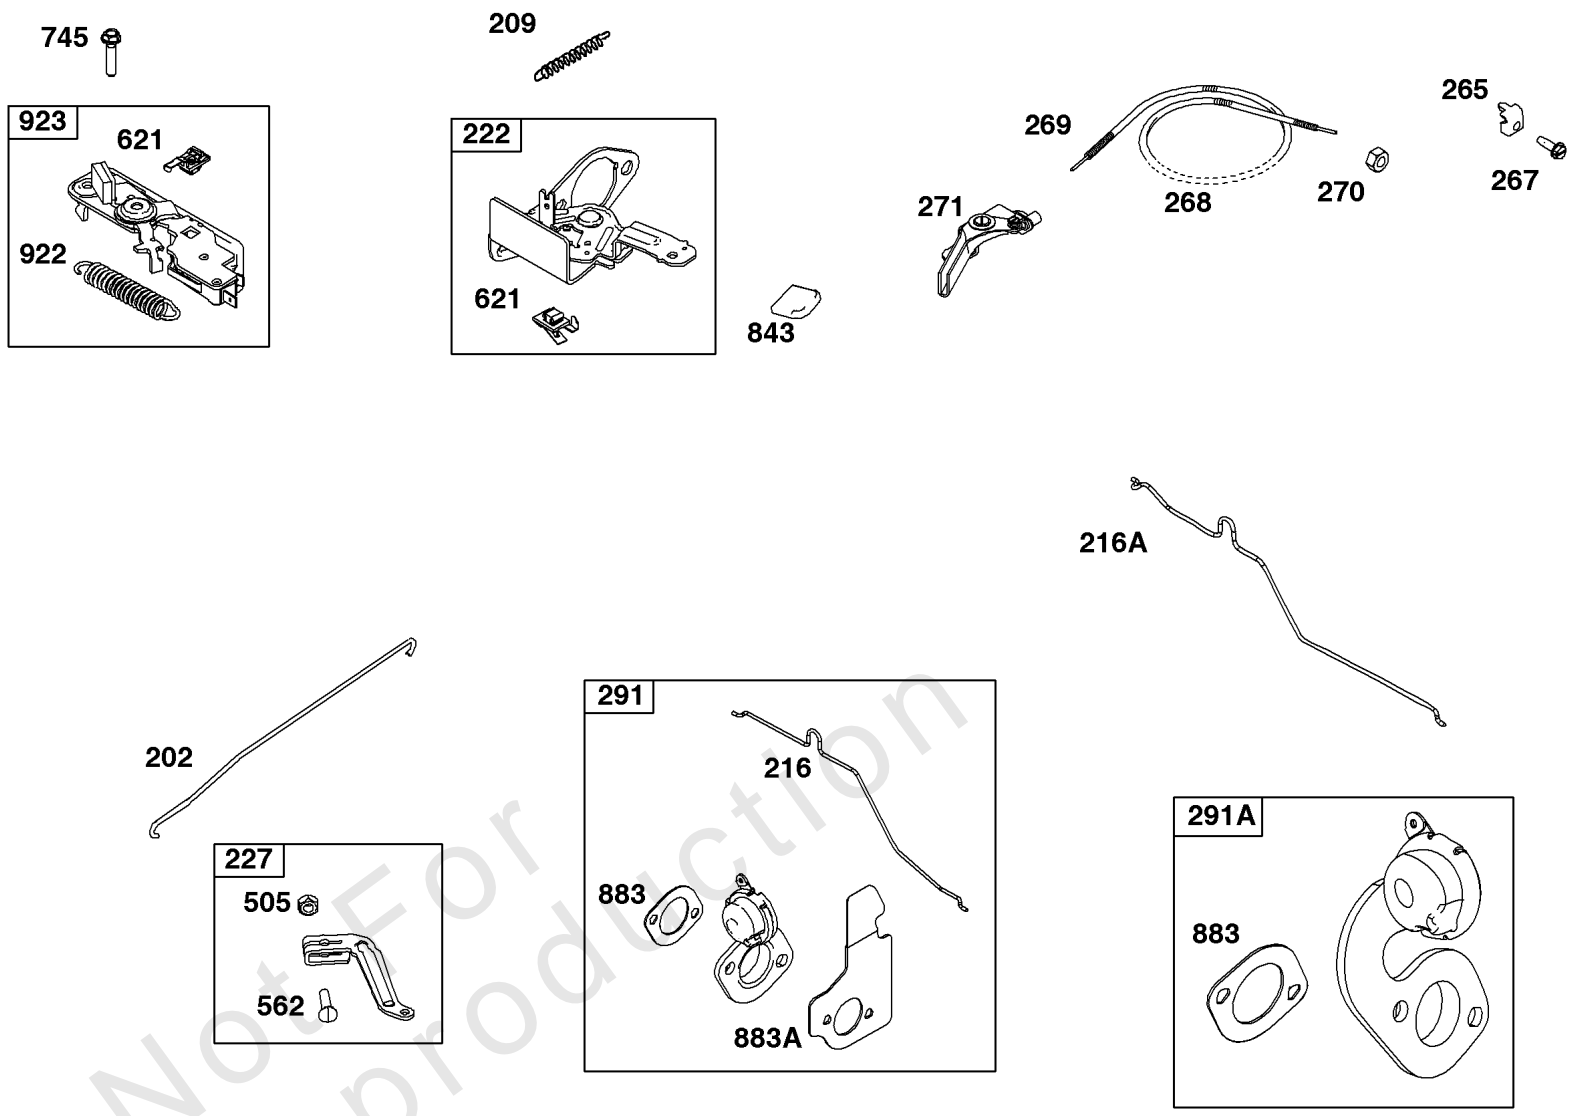 







Controls, Governor Spring, Thermostat

REF NO	PART NO	QTY	DESCRIPTION
202	796657		Link-Mechanical Governor
209	793604		Spring-Governor
216A	798944		Link-Choke
222	796482		Bracket-Control -(Manual Friction, Remote, & Fixed Speed Control)
227	796487		Lever-Governor Control
265	691024		CLAMP, Casing
267	691044		SCREW -(Casing Clamp)
268	691025		CASING, Control Wire -(Cut To Required Length)
269	691026		WIRE, Control -(Cut To Required Length)
270	691027		NUT -(Control Wire Casing)
271	691028		Lever-Control
291A	798938		Thermostat
505	793515		NUT -(Governor Control Lever)
562	793514		Bolt -(Governor Control Lever)
621	692310		Switch-Stop
745	793491		Screw -(Brake)
883	793497		Gasket-Exhaust
883A	796677		Gasket-Exhaust
922	692135		Spring-Brake
923	796635		Brake

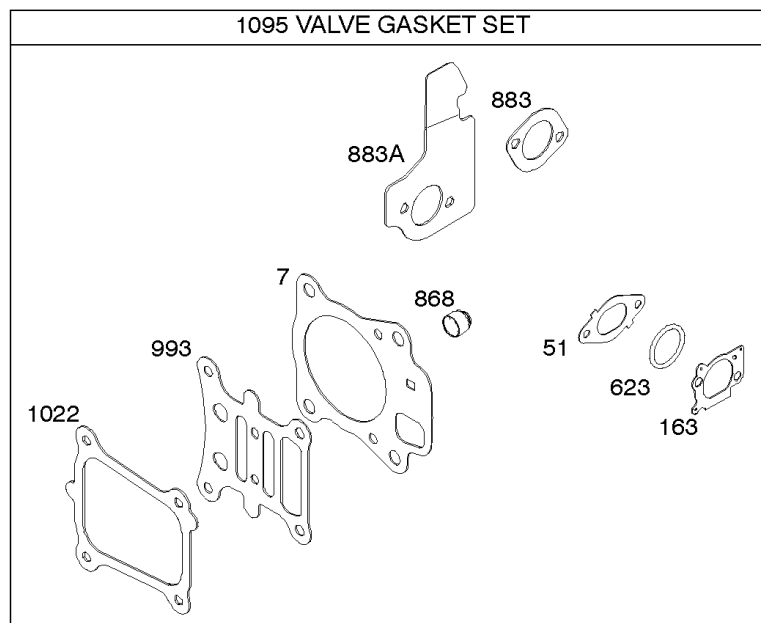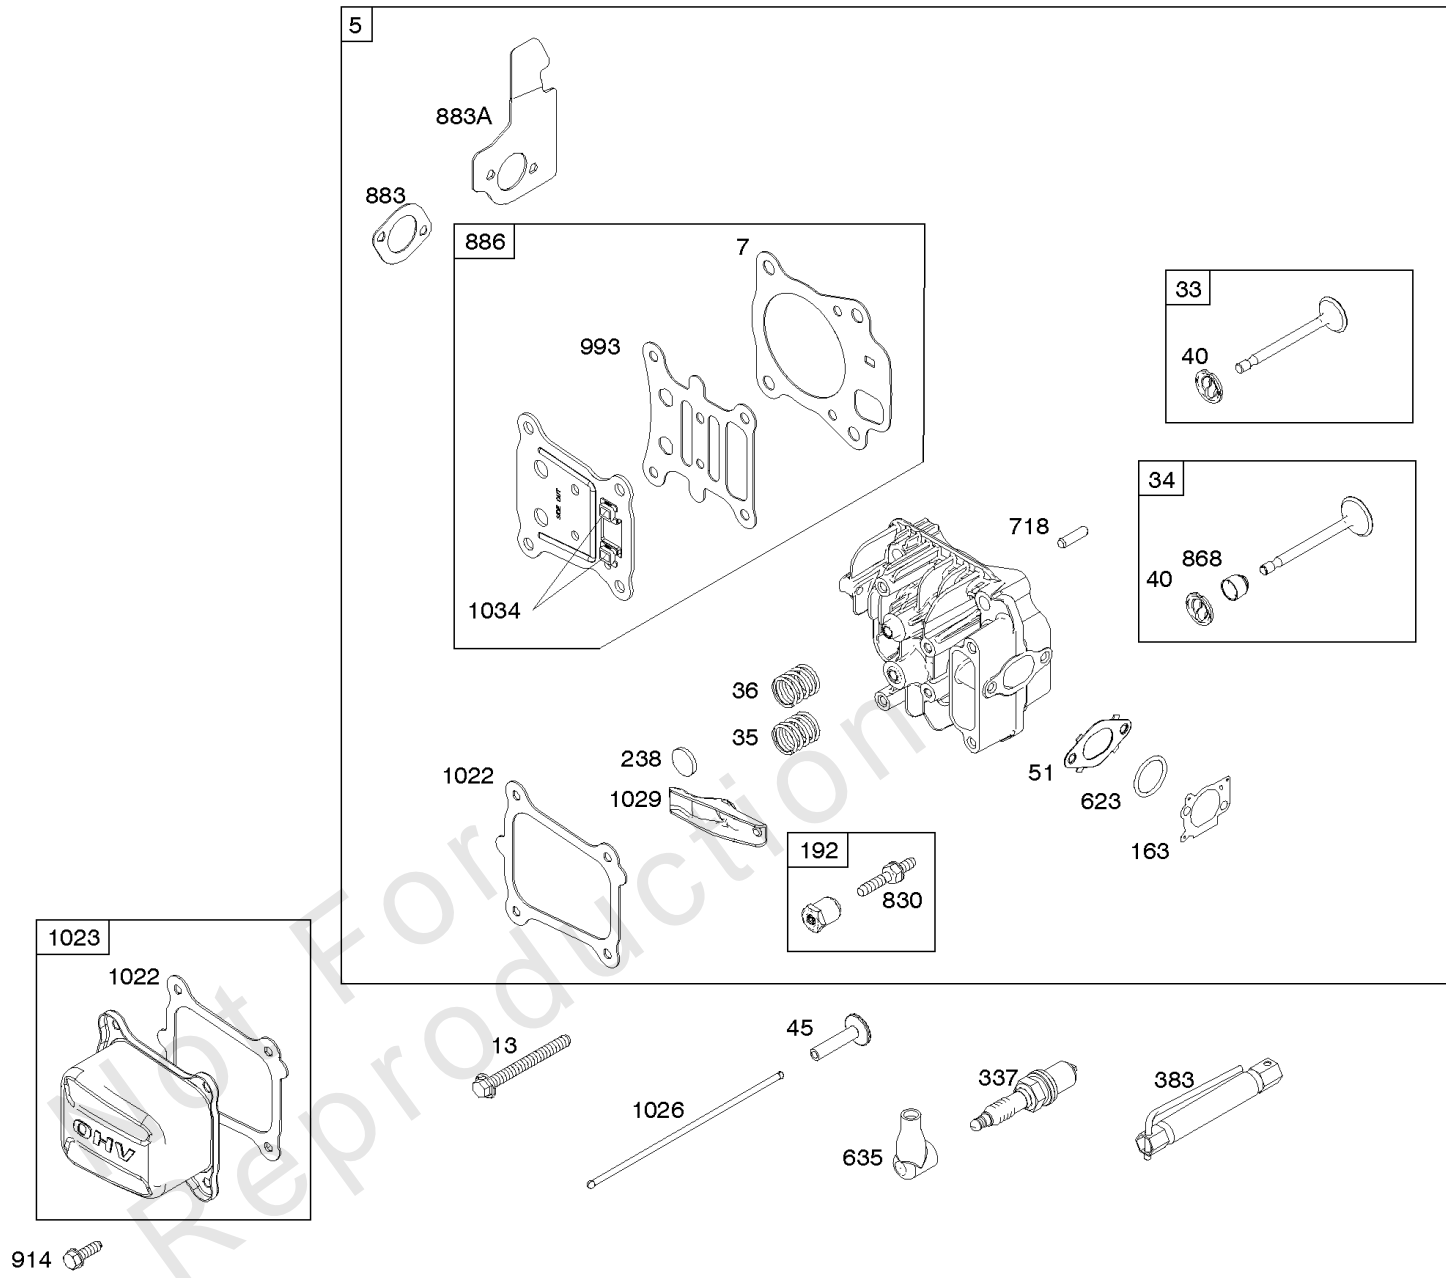  

Cylinder Head, Gasket Set-Valves, Valves

REF NO	PART NO	QTY	DESCRIPTION
5	796471		Head-Cylinder
7	796475		Gasket-Cylinder Head
13	793451		Screw -(Cylinder Head)
33	499642		Valve-Exhaust
34	795443		Valve-Intake
35	691304		Spring-Valve -(Intake)
36	691304		Spring-Valve -(Exhaust)
40	692194		Retainer-Valve
45	690977		TAPPET, Valve
51	796596		Gasket-Intake
163	691894		Gasket-Air Cleaner
192	796631		Adjuster-Rocker Arm
238	691300		Cap-Valve
337	594264		Plug-Spark
383	19576S		WRENCH, Spark Plug
623	793628		Seal-O Ring -(Carburetor Spacer)
635	66538S		BOOT, Spark Plug
718	690959		PIN, Locating
830	796472		Stud-Rocker Arm
868	795440		Seal-Valve
883	793497		Gasket-Exhaust
883A	796677		Gasket-Exhaust
886	799492		Gasket Kit-Cylinder Head/Plate
914	794451		Screw -(Rocker Cover)
993	796473		Gasket-Cylinder Head Plate
1022	796480		Gasket-Rocker Cover
1023	796479		Cover-Rocker
1026	796481		Rod-Push
1029	691230		Arm-Rocker
1034	691343		Guide-Push Rod
1095	799496		Gasket Set-Valve


 
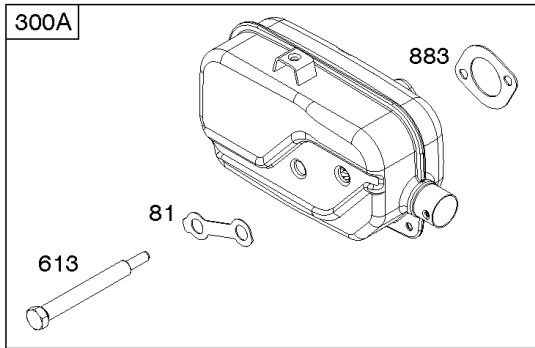 
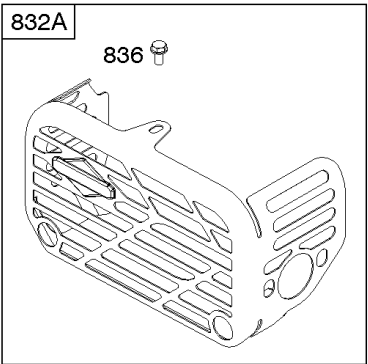 
 
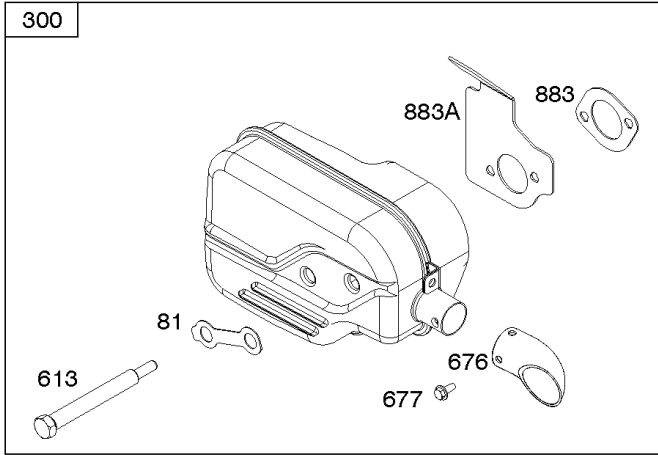 
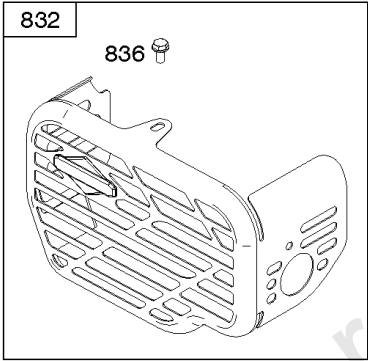 


Not For
Reproduction

Exhaust System

REF NO	PART NO	QTY	DESCRIPTION
81	691740		Lock-Muffler Screw
300A	798940		Muffler
613	796496		Screw -(Muffler)
676	692010		Deflector-Muffler
676A	799187		Deflector-Muffler
677	690661		SCREW -(Muffler Deflector)
832A	593411		Guard-Muffler
836	793500		Screw -(Muffler Guard)
837	797735		Spacer-Muffler
883	793497		Gasket-Exhaust
883A	796677		Gasket-Exhaust
994	690813		Arrestor-Spark

      
 
Not For
Reproduction

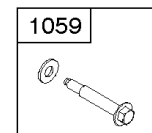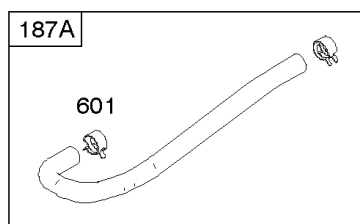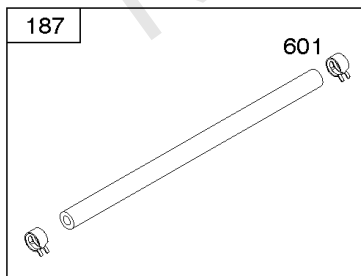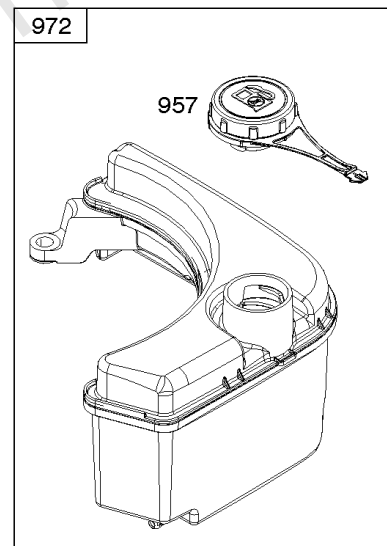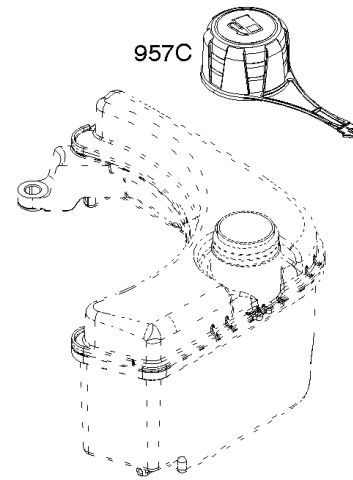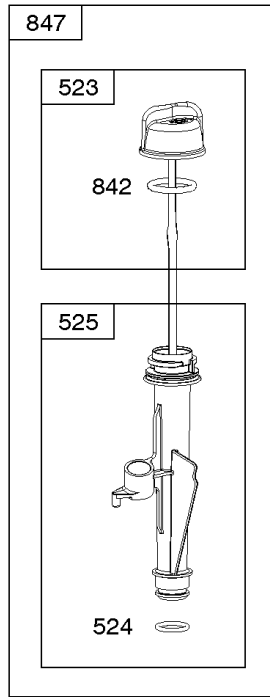

Fuel Supply, Lubrication

REF NO	PART NO	QTY	DESCRIPTION
187	791766		LINE, Fuel -(Cut To Required Length)
187A	796491		Line-Fuel -(Formed Hose)
523	796503		DIPSTICK
524	692296		Seal-Dipstick Tube
525	796502		Tube-Dipstick
601	791850		CLAMP, Hose
670	793485		Spacer-Fuel Tank
842	691031		SEAL, O-Ring -(Dipstick Tube)
847	796501		Dipstick/Tube Assembly
957	799585		Cap-Fuel Tank
957C	796577		Cap-Fuel Tank
972	590949		Tank-Fuel -(Plastic)
1059	793471		Kit-Screw/Washer

  Not For
Reproduction

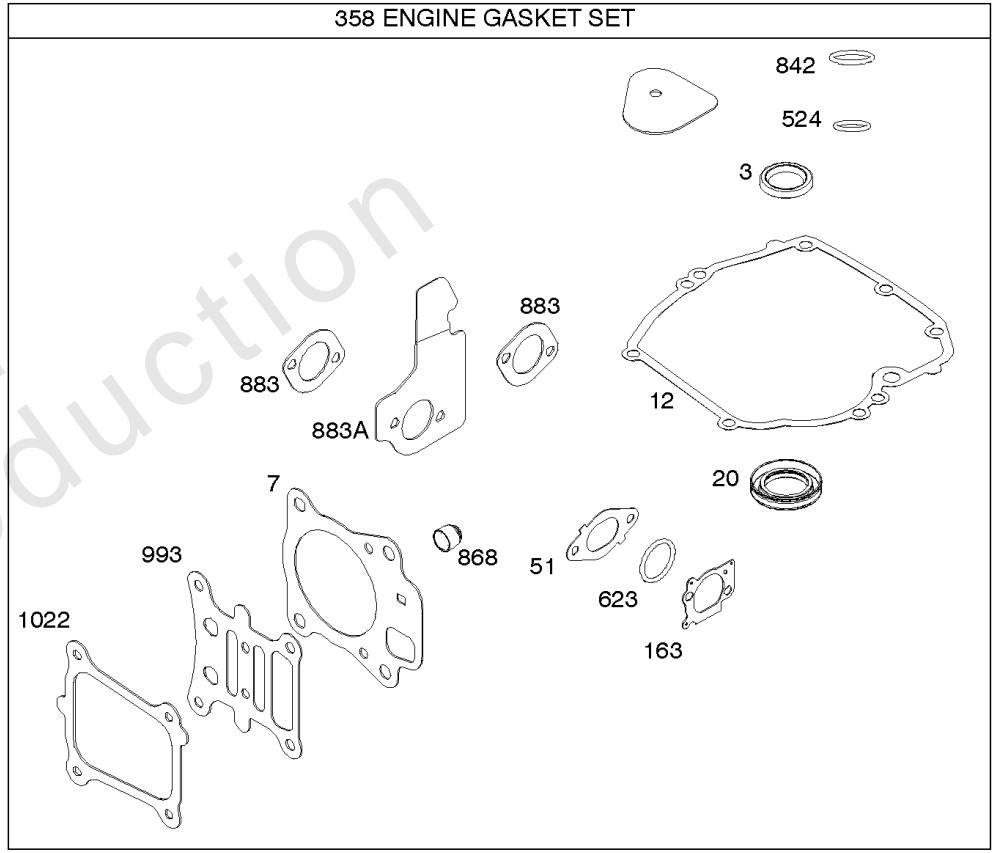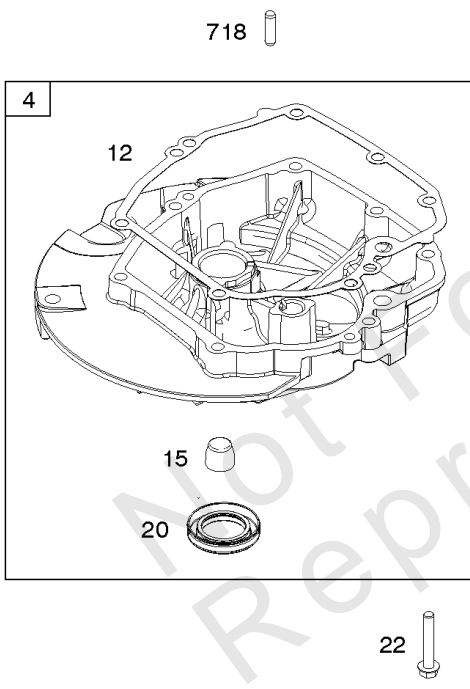

Gasket Set-Engine, Sump

REF NO	PART NO	QTY	DESCRIPTION
3	299819S		SEAL, Oil -(Magneto Side)
4	493279		Sump, Engine
7	796475		Gasket-Cylinder Head
12	692232		Gasket-Crankcase
15	691680		Plug-Oil Drain -(Square Socket)
20	399781S		Seal-Oil -(PTO Side)
22	691092		Screw -(Crankcase Cover/Sump)
51	796596		Gasket-Intake
163	691894		Gasket-Air Cleaner
358	799495		Gasket Set-Engine
524	692296		Seal-Dipstick Tube
623	793628		Seal-O Ring -(Carburetor Spacer)
718	690959		PIN, Locating
842	691031		SEAL, O-Ring -(Dipstick Tube)
868	795440		Seal-Valve
883	793497		Gasket-Exhaust
883A	796677		Gasket-Exhaust
993	796473		Gasket-Cylinder Head Plate
1022	796480		Gasket-Rocker Cover

