



EXPLODED VIEW & PARTS LIST

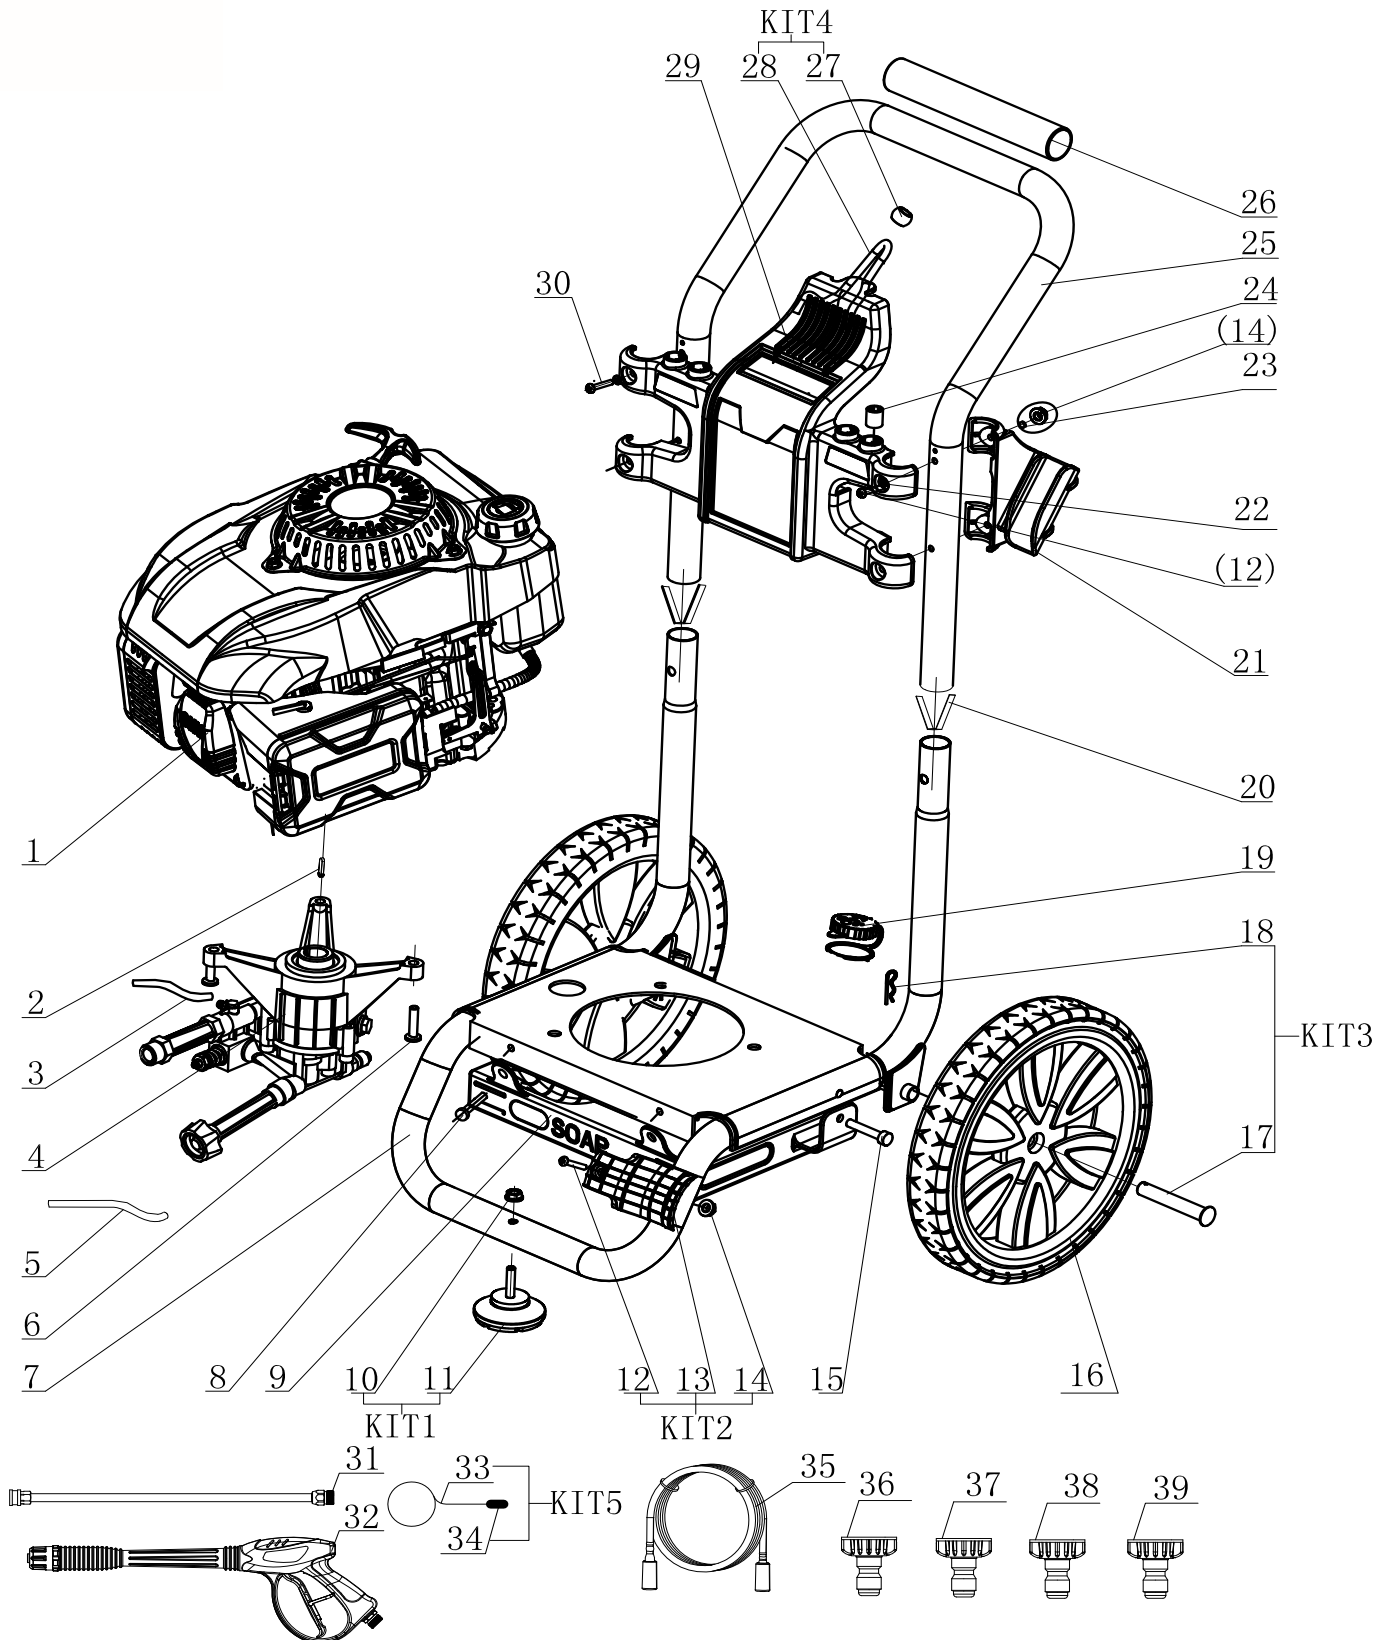

EXPLODED VIEW & PARTS LIST

No.	Parts Number	Description	Qty.
1	PW28-001	Engine	1
2	PW28-002	Flat Key	1
3	PW28-003	Siphon Tube	1
4	PW28-004	Water Pump	1
5	PW28-005	Soap Drainage Hose	1
6	PW28-006	Bolt	3
7	PW28-007	Lower "A" Frame Assembly	1
8	PW28-008	Bolt	2
9	PW31B-004	Detergent Tank	1
10	PW31-006	Lock Nut	2
11	PW31-007	Foot	1
12	PW31-008	GB/T 818-76 M6X45 Screw	3
13	PW31-009	Lower Gun Hook	1
14	PW31-010	Lock Nut	5
15	PW31-011	Bolt	1
16	PW31-014	12" Wheel	2
17	PW31-013	Wheel Axle	2
18	PW31-015	Cotter Pin	2
19	PW31-003	Detergent Tank Cap	1
20	PW31-018	Spring	2
21	PW31-019	Upper Gun Hook	1
22	PW28-022	Washer	4
23	PW31-020	Ignition Collar	2
24	PW31-021	Nozzle Holder	4
25	PW28-025	Handle	1
26	PW31-023	Foam Grip	1
27	PW31-024	Bungee Cord Knob	1
28	PW31-025	Bungee Cord	1
29	PW31-176	Panel	1
30	PW31B-020	Bolt and Nut	2
31	PW31-032	Lance	1
32	PW31-033	Spray Gun	1
33	PW31-034	Nozzle Cleaner	1
34	PW31-034	Nozzle Cleaner Holder	1
35	PW28-035	High Pressure Hose	1
36	PW31-037	Red Nozzle 0°	1
37	PW31-039	Green Nozzle 15°	1
38	PW31-040	White Nozzle 40°	1
39	PW31-041	Black Nozzle	1
40	PW28-040	Wrench	1
41	PW28-041	Screwdriver	1
42	PW28-042	Spark Plug Cover	1

EXPLODED VIEW & PARTS LIST

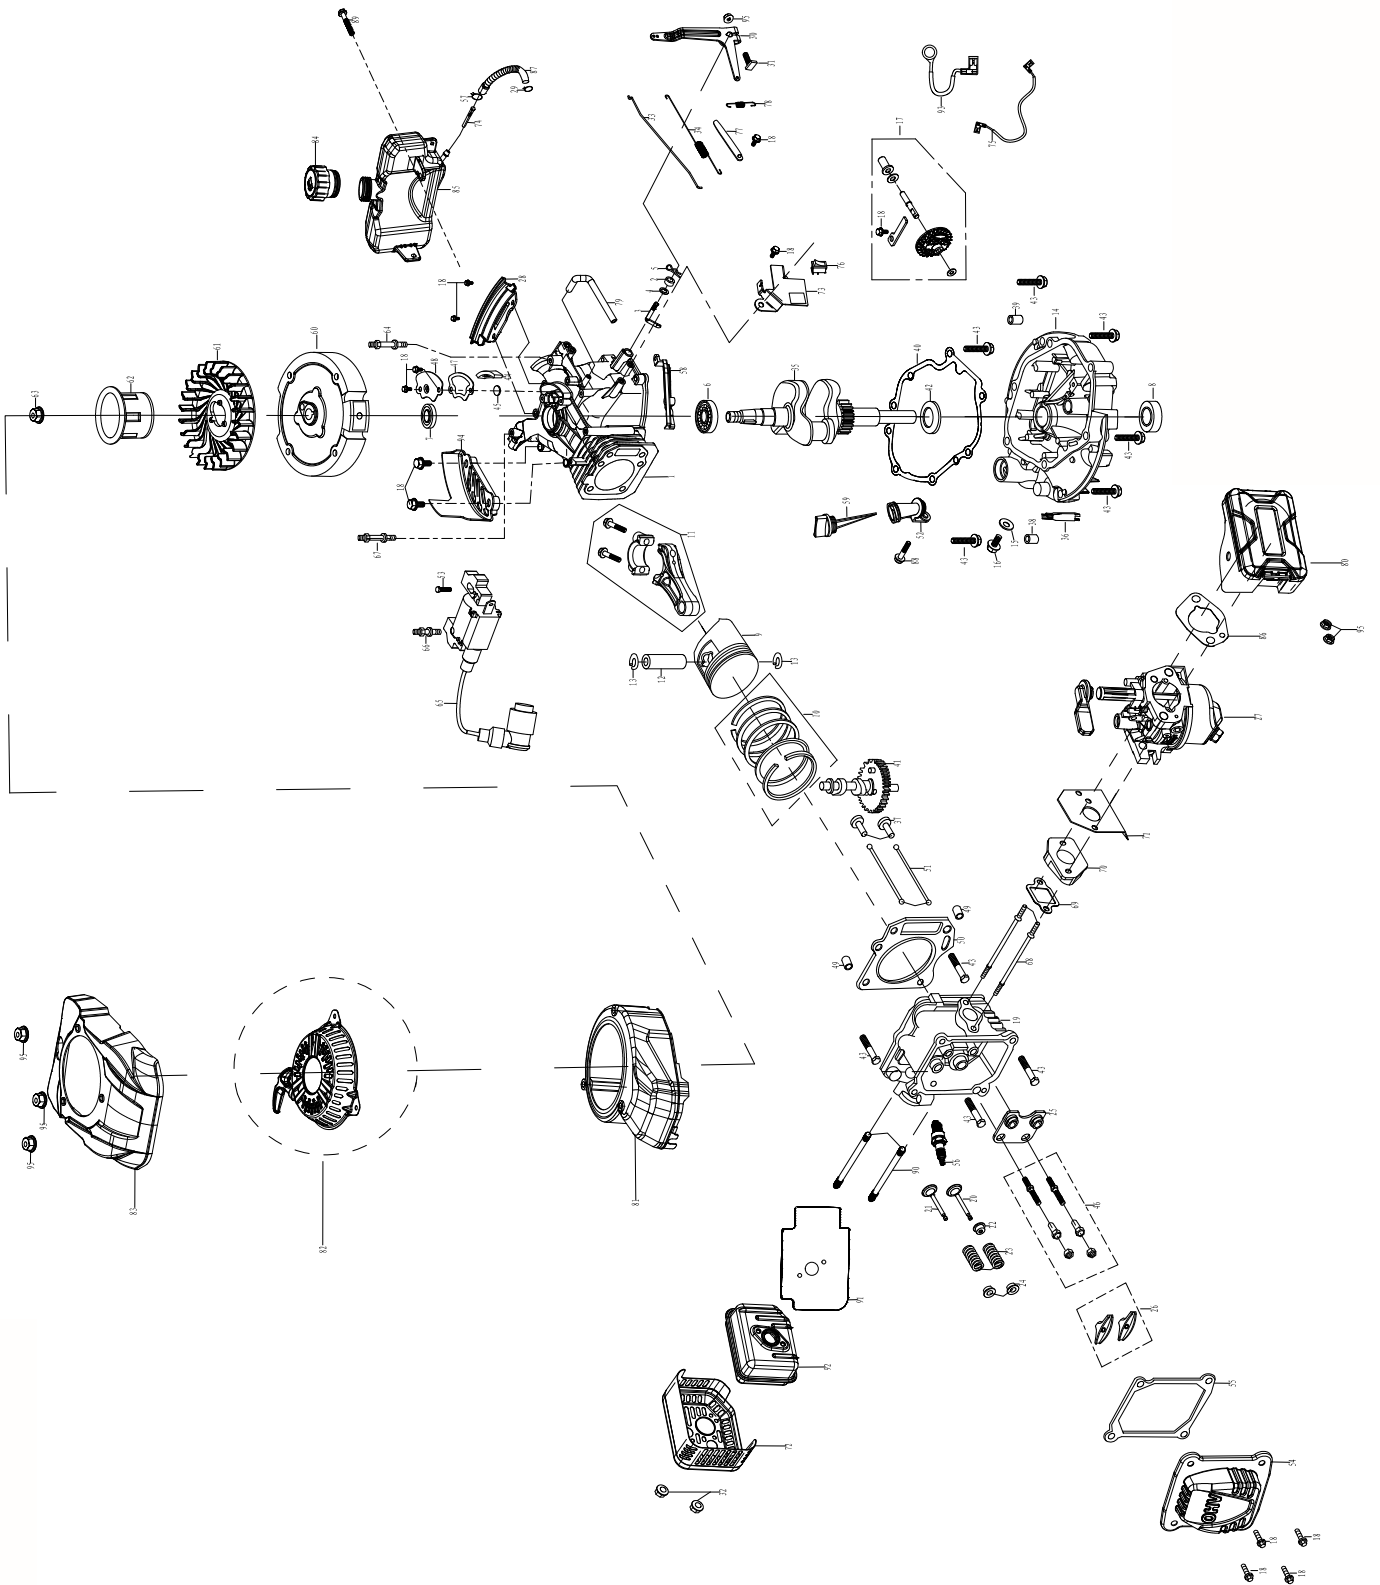

EXPLODED VIEW & PARTS LIST

No.	Parts Number	Description	Qty.
1	PW31-101	Crankcase	1
2	PW28-102	Governor Arm Shaft Seal	1
3	PW28-103	Governor Arm Shaft	1
4	PW28-104	Washer	1
5	PW31-107	Lock Pin	1
6	PW31-102	Ball Bearing	1
7	PW28-105	Oil Seal	1
8	PW28-106	Oil Seal	1
9	PW28-107	Piston	1
10	PW28-108	Piston Ring	1
11	PW28-109	Connecting Rod	1
12	PW31-114	Piston Pin	1
13	PW31-115	Piston Clip	2
14	PW28-110	Crankcase Assembly	1
15	PW31-109	Drain Plug Washer	1
16	PW31-108	Drain Plug Bolt	1
17	PW28-111	Governor Assembly	1
18	PW31-135	M6 Bolt	13
19	PW28-112	Cylinder Head	1
20	PW28-113	Intake Valve	1
21	PW28-114	Exhaust Valve	1
22	PW28-115	Return Valve	1
23	PW31-123	Valve Spring	2
24	PW31-124	Valve Spring Seat	2
25	PW28-114	Push Rod Guide	1
26	PW28-115	Rocker Assembly	2
27	PW28-116	Carburetor Assembly	1
28	PW28-117	Shroud	1
29	PW31-133	Fuel Line Clip	1
30	PW28-118	Governor Arm	1
31	PW31-135	Governor Bolt	1
32	PW31-136	M6 Nut	2
33	PW28-119	Governor Rod	1
34	PW28-120	Throttle Return Spring	1
35	PW28-121	Crankshaft Assembly	1
36	PW28-122	Oil Pipe	1
37	PW28-123	Lifter	2
38	PW28-124	Bushing	1
39	PW28-125	Bushing	1
40	PW28-126	Gasket	1
41	PW28-127	Camshaft Assembly	1
42	PW28-128	Washer	1
43	PW28-129	M8 Bolt	10
44	PW28-130	Filter	1
45	PW28-131	Valve Cover	1
46	PW31-129	Stud Bolt	2
47	PW28-132	Valve Gasket	1
48	PW28-133	Valve Cap	1

No.	Parts Number	Description	Qty.
49	PW31-110	Dowel Pin	2
50	PW23-134	Head Gasket	1
51	PW31-146	Push Rod	2
52	PW28-134	Oil Filler Extension	1
53	PW28-135	M6 Bolt	1
54	PW28-136	Cylinder Head Cover	1
55	PW28-137	Head Cover Gasket	1
56	PW28-138	Spark Plug	1
57	PW28-139	Fuel Line Clip	1
58	PW28-140	Shroud	1
59	PW28-141	Dipstick	1
60	PW28-142	Flywheel Cover	1
61	PW28-143	Fan	1
62	PW28-144	Flange	1
63	PW31-173	M14 Nut	1
64	PW28-145	Recoil Stud Bolt	1
65	PW28-146	Ignition Coil Assembly	1
66	PW28-147	Ignition Coil Bolt	1
67	PW28-148	Starter Bolt	1
68	PW28-149	Stud Bolt	2
69	PW28-150	Intake Gasket	1
70	PW28-151	Carburetor Spacer	1
71	PW28-152	Carburetor Gasket	1
72	PW28-153	Muffler Shield	1
73	PW28-154	Shroud Assembly	1
74	PW28-155	Filter	1
75	PW28-156	Wire	1
76	PW28-157	On/Off Switch	1
77	PW31-184	Wire Harness Clip	1
78	PW28-158	Governor Spring	1
79	PW28-159	Breather Tube	1
80	PW28-160	Air Cleaner Assembly	1
81	PW28-161	Fan	1
82	PW28-162	Recoil Starter	1
83	PW28-163	Fan Cover	1
84	PW28-164	Fuel Tank Cap	1
85	PW28-165	Fuel Tank Assembly	1
86	PW28-166	Carburetor Spacer	1
87	PW28-167	Fuel Line	1
88	PW28-168	M8x20 Bolt	1
89	PW28-169	M6x20 Bolt	1
90	PW28-170	Stud Bolt	2
91	PW28-171	Exhaust Gasket	1
92	PW28-172	Muffler	1
93	PW28-173	Wire	1
94	PW28-174	Shroud	1
95	PW28-175	M6 Nut	6